 


# Assembly Instructions


ASTRID CONSOLE

CSRC07

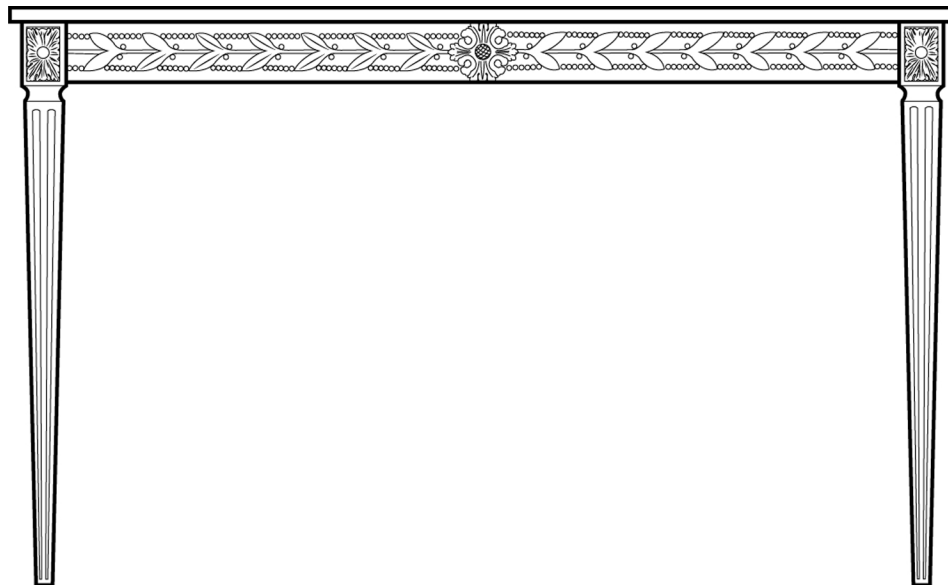


# ASTRID CONSOLE

 
FRONT VIEW

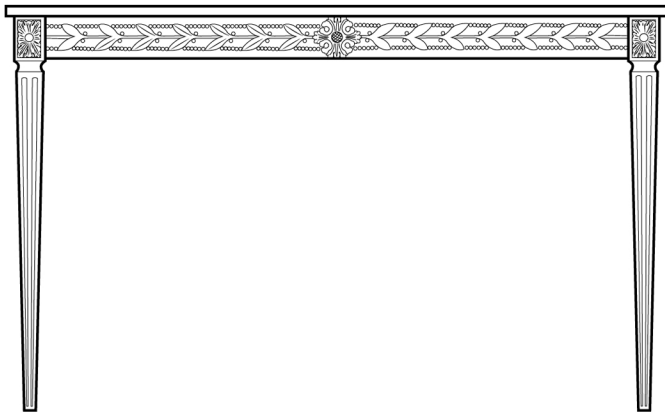

BACK VIEW

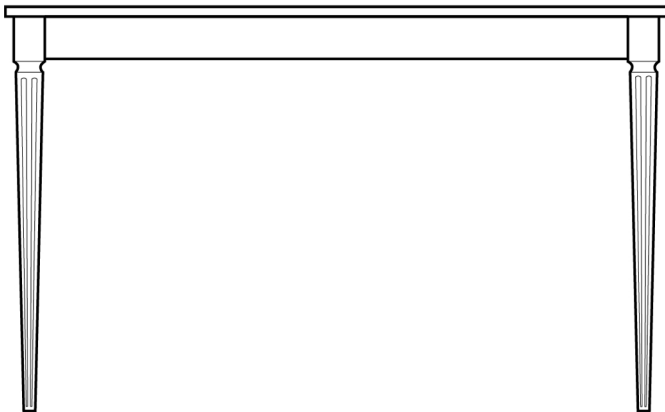 

SIDE VIEW

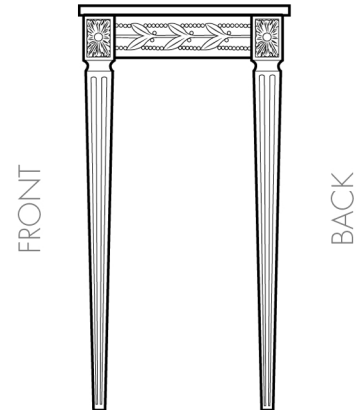 

## WARNING

1. Always exercise care and caution when moving heavy furniture to avoid injury and/or damage to the product. You will need at least two people for this assembly. Be mindful when moving and placing furniture as to not damage the piece or flooring.

2. Periodically check all fittings to ensure none have come loose. Re-tighten when necessary. Always fasten as tight as possible. Incorrect assembly of furniture can be dangerous, so please read through the complete instructions and follow the directions carefully.

3. To avoid risk of injury or death from a fall-over accident, install the included anti-tip kit immediately. Always place heavy items with their weight centered on the marble top.

 
4. No liability will be accepted for any damage or injury caused by incorrectly assembled furniture or failure to use an anti-tip safety device.

# PARTS INCLUDED

A. Marble Top x 1



B. Frame x 1

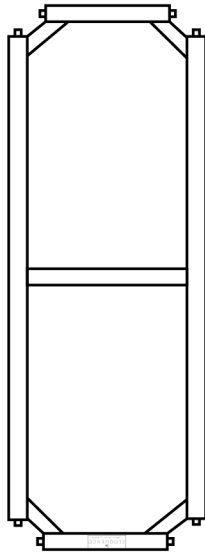

C. Short Screw x 2



D. Bolt x 8



E. Small Washer x 8



F. Large Washer x 8

 


G. Hex Key x 1




H. Astrid Front Leg x 2

Two Carved Rosettes

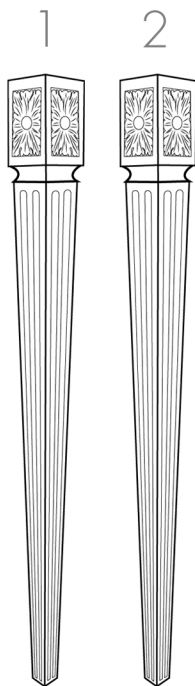

I. Astrid Back Leg x 2

 
One Carved Rosette

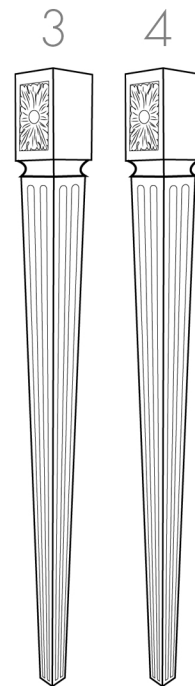

**NOTE:** Front legs have two decorative sides, while the back legs only have one.

# ASSEMBLY INSTRUCTIONS

 1. Lay Frame **(B)** on a soft, clean, and level surface, bottom side up.

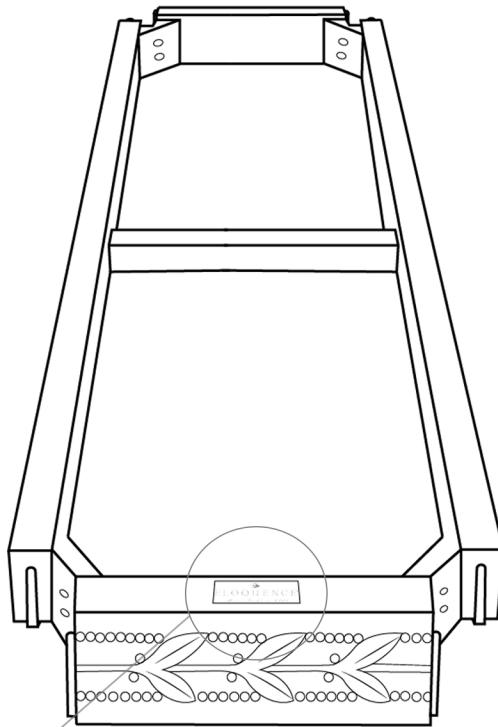


**NOTE:** The Eloquence® name plate should be visible.




2. Attach legs 1-4, beginning with front legs 1 and 2:

 - i. Prepare all bolts **(D)** by sliding on a small washer **(E)**, then a large washer **(F)** and pushing until the washers are stopped by the bolt head.

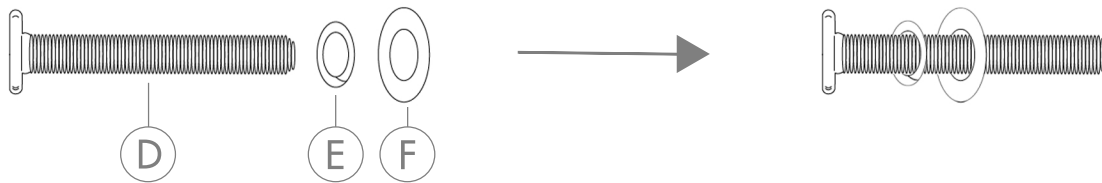


 - ii. Hold leg 1 and align the grooves in the leg with the wooden tongues protruding from the leg cutouts in the frame **(B)**. Slide the leg down into the frame until the holes of the leg and frame line up. Use the same positioning as indicated in the diagram below. Note the position and orientation of the Eloquence® metal name plate.

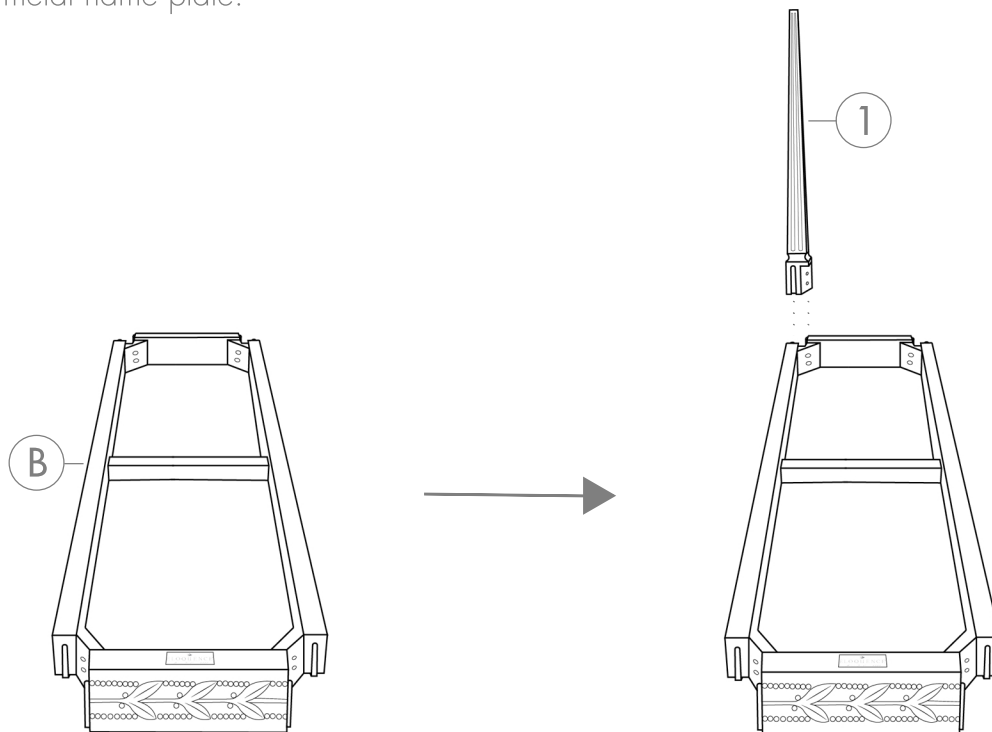


2. Continue attaching legs 2 - 4:

 - iii. Using the hex key, insert bolt with washers through the bottom hole in the frame and into the bottom hole in the leg. Hand tighten with the hex key. Repeat this step for the top hole.

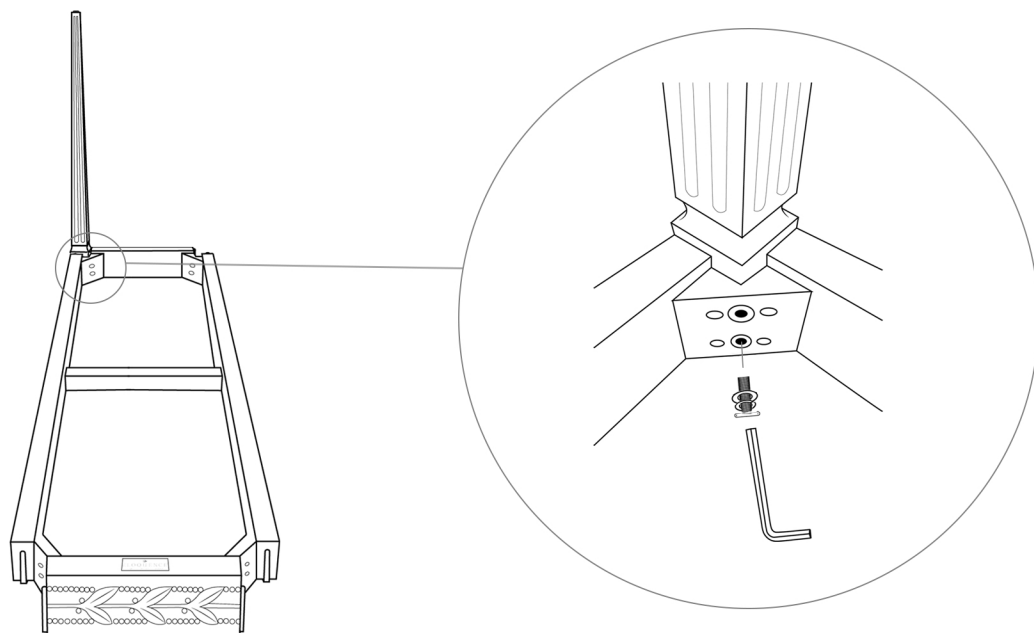


- iv. Repeat leg attachment steps for legs 2, 3, and 4 in the order and locations as indicated in the diagram below: (2,3,4).

 **NOTE:** Attaching legs in the wrong positions will result in blank faces on the legs showing where rosettes should be.

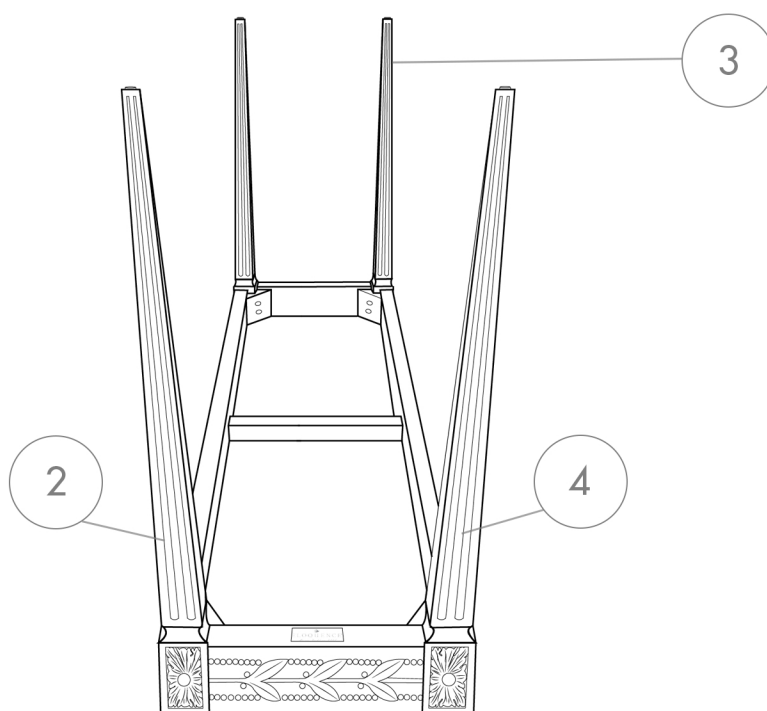

 3. With a person at each end, use two hands to carefully flip over the frame and newly attached four legs. The console will now be standing upright on its legs.

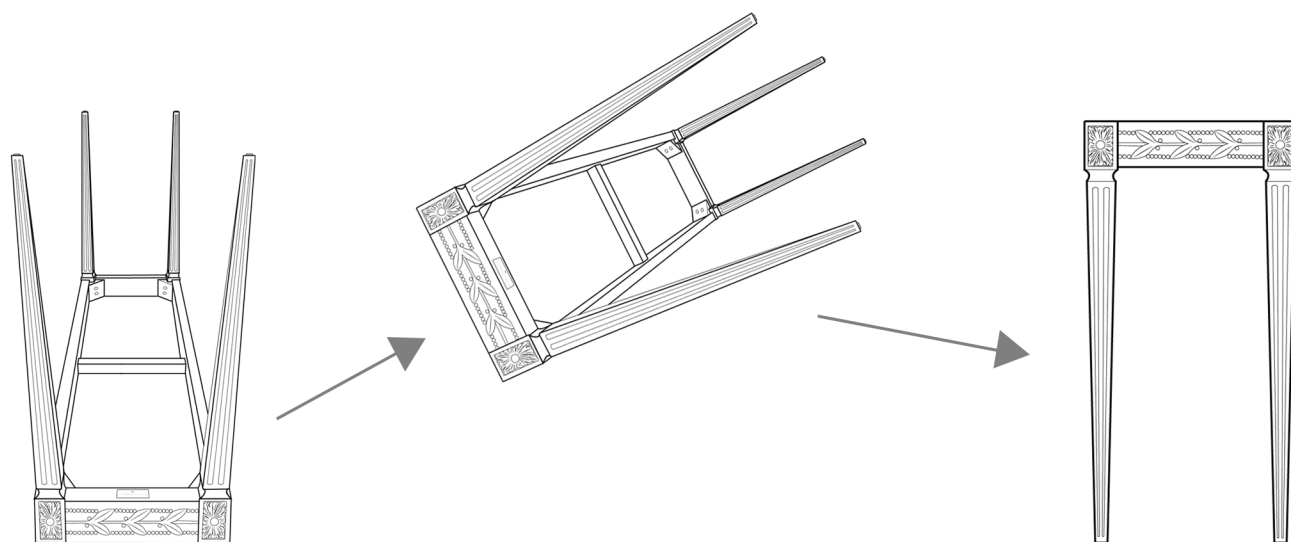

#### 4. Installing Anti-Tip Devices:

##### Anti-tip Kit Parts Included

 


A. Metal Ring x 2



B. Metal Lock x 4


C. Plastic Anchor x 4



D. Short Screw x 4



 
E. Long Screw x 4




Requires: Drill with (+) head attachment, drill bit for drilling plastic anchor holes, hammer, and pencil.

4. Installing Anti-Tip Devices, continued:

 - i. Using a drill and two short metal screws **(D)**, attach metal locks **(B)** to the back tops of the console legs. Orient locks in top middle of leg face.

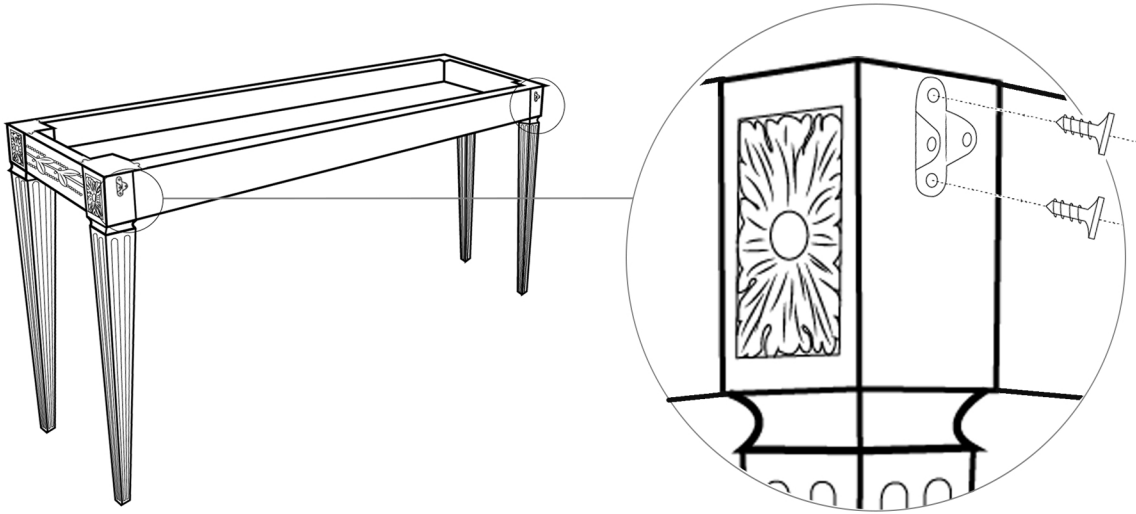

 - ii. Loop metal ring through the metal lock attached to the console and an additional loose metal lock.

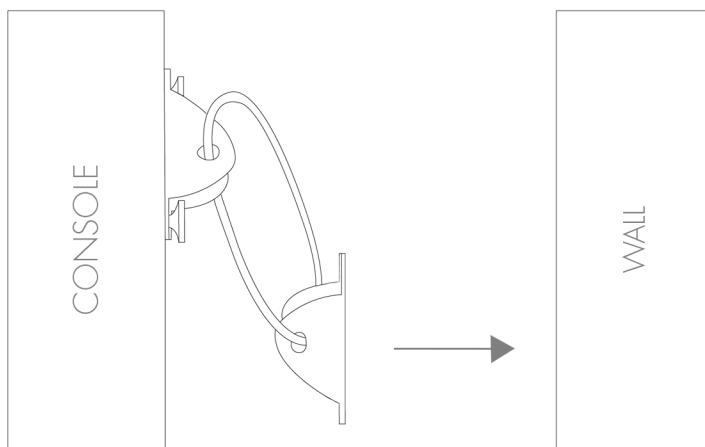


\* Console lock is secured higher than the wall lock, allowing the ring to move vertically if the console is pushed back towards the wall.

- iii. Find the desired places on the wall to attach the metal locks and use a pencil to make drill guide marks. Remove the loose metal lock from the metal ring.

**NOTE:** Positioning of wall-mounted metal lock should be lower than the console-mounted metal lock.


4. Installing Anti-Tip Devices, continued:

 - iv. Drill holes as marked for the plastic anchors **(C)**. Hammer plastic anchors into the holes in the wall. Screw the long screws **(E)** through the metal locks and into the plastic anchors in the wall to securely attach them to the wall.

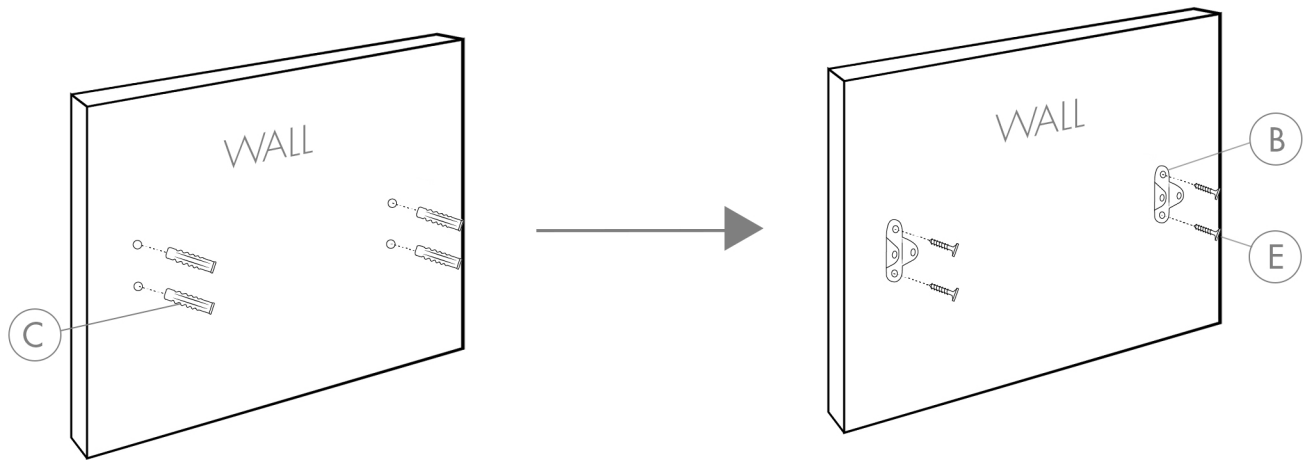


- v. Securely fasten metal ring through console metal lock and wall metal lock. Repeat these steps for the other end of the console.

 5. For safety, this step should be done by two people. With one person at each end, carefully lift the marble top **(A)** and place it centered on top of the frame.

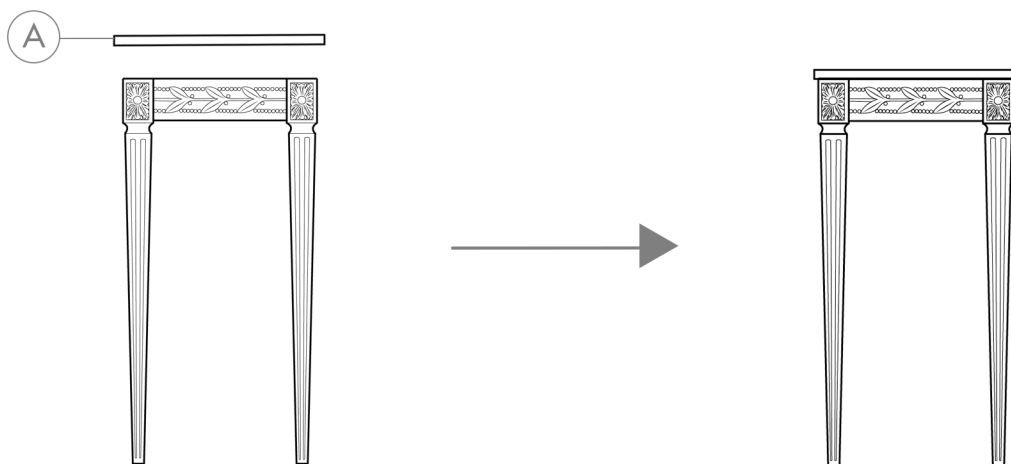

 6. Locate the two metal angle brackets attached to the bottom of the marble top **(A)** and drill short screws **(C)** through each bracket into the frame **(B)**.

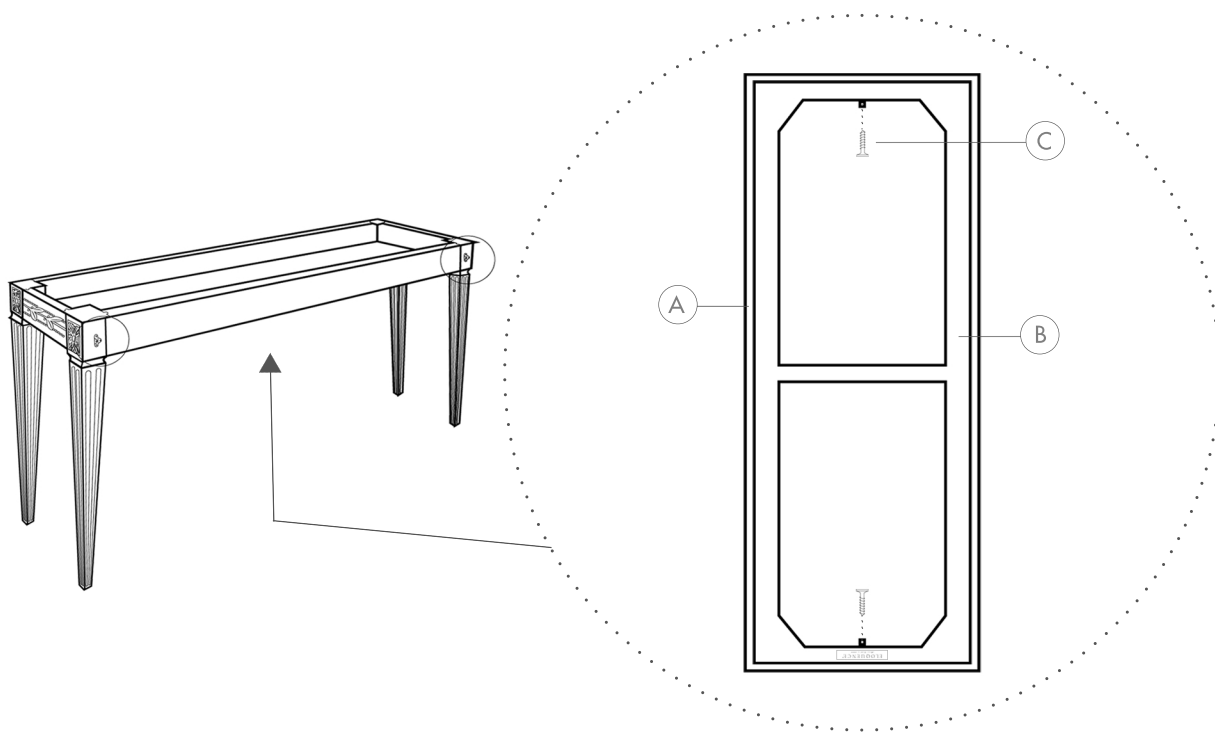

7. Enjoy your new furniture from Eloquence®! We hope that it will bring beauty and happiness to your home for years to come!

*Merci!*

## CARE INSTRUCTIONS

The use of coasters or placemats helps prevent marks or stains on the top. Never place hot items on the table top. Blot all spills immediately. When cleaning, wipe the top of the console with a diluted solution of mild detergent and warm water. Always clean the top in its entirety, not in small areas, to avoid any patches of discoloration over time.

Proper care and cleaning will keep your furniture looking its best.

---

[WWW.ELOQUENCE.COM](http://WWW.ELOQUENCE.COM)

310.876.0661

[info@eloquence.com](mailto:info@eloquence.com)

3601 Holdrege Avenue

Los Angeles, CA 90016