




ELOQUENCE®

Maison Fondée en 2002


DAUPHINE BED
Assembly Instructions & Care

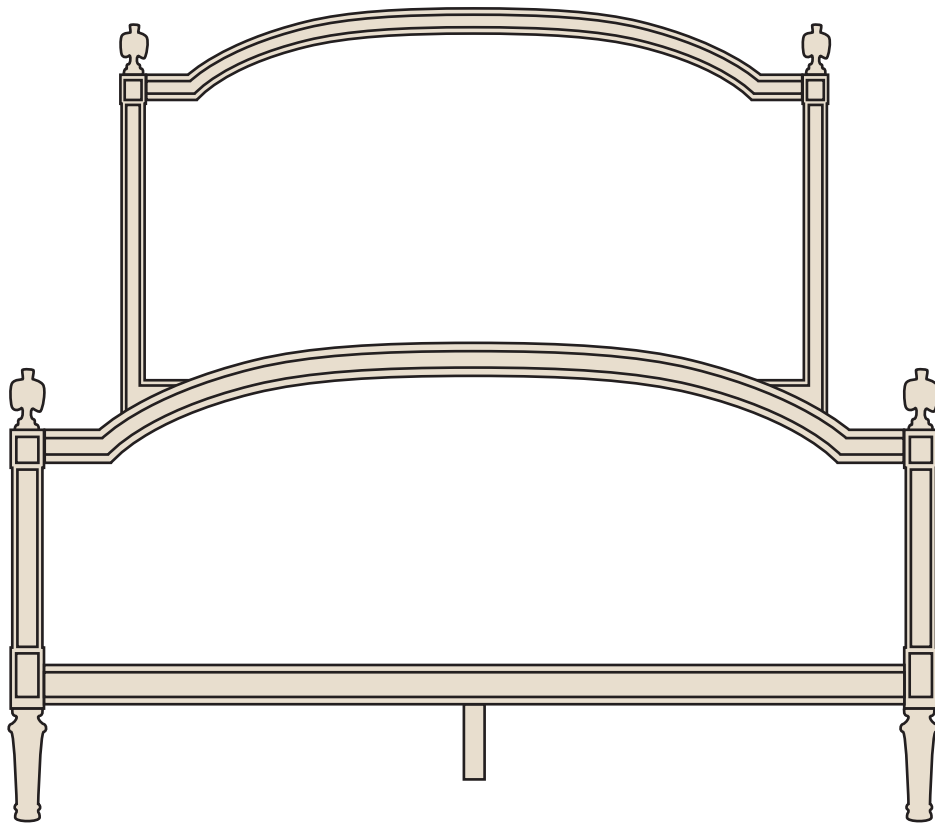


LIST OF ELOQUENCE® DAUPHINE BED PARTS

MATTRESS SLATS


STRAIGHT SLAT x 1
"T" SLATS x 6

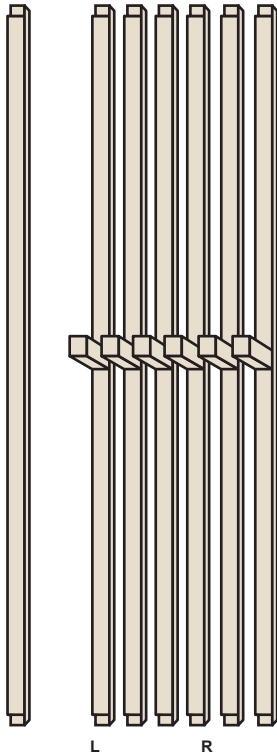


BED RAILS x 2

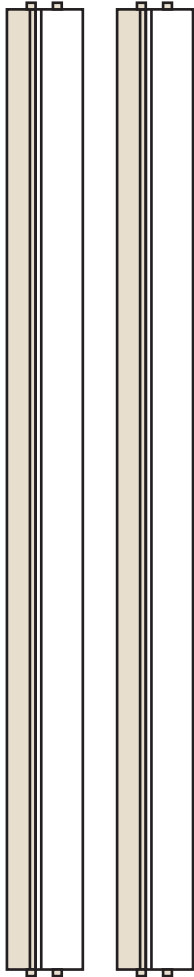

HEADBOARD

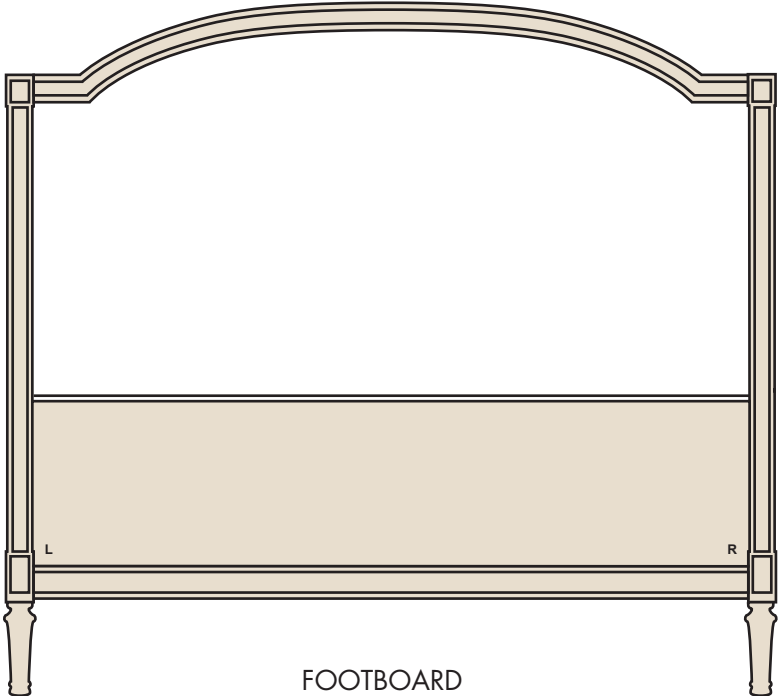

FINIALS x 4



BED RAIL BOLTS x 8




HEX WRENCHES x 2



STEP 1.


LINE UP THE HEADBOARD AND FOOTBOARD WITH THE LEFT AND RIGHT BED RAILS.

Please look for the sticker labels at the base of each piece to guide you.

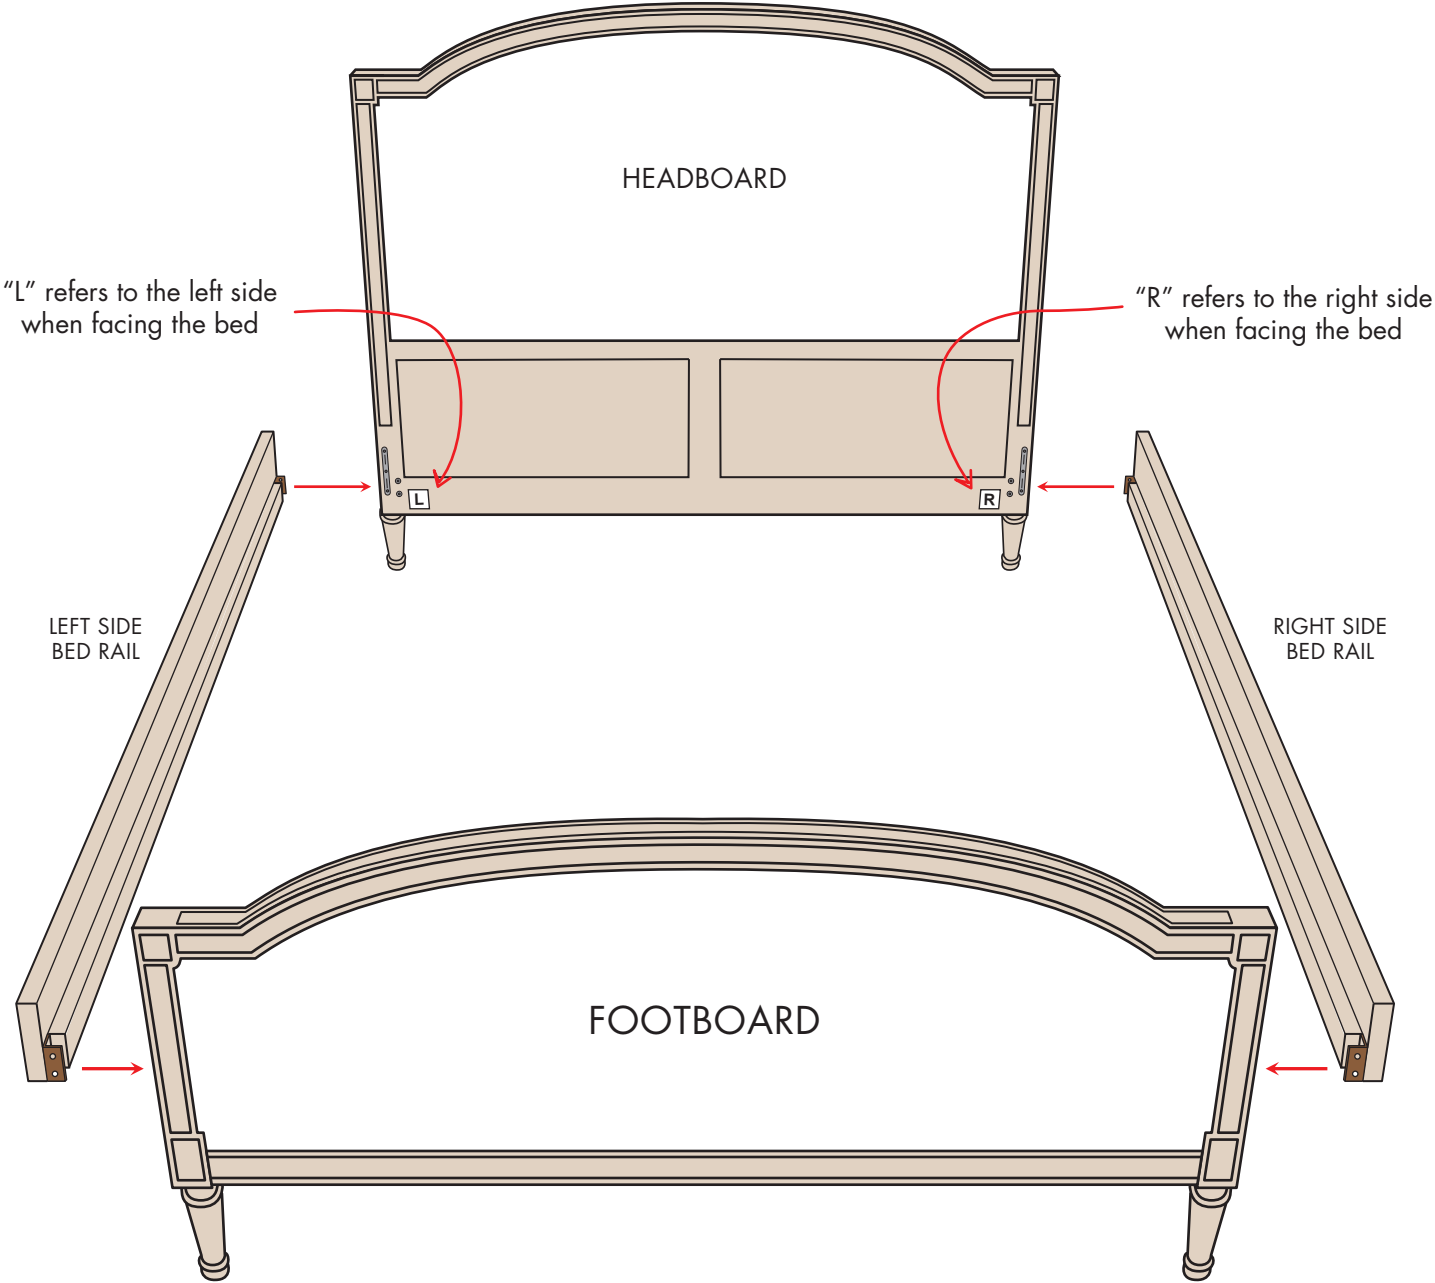


STEP 2.

ATTACH THE BED RAILS
TO THE HEADBOARD
AND FOOTBOARD.

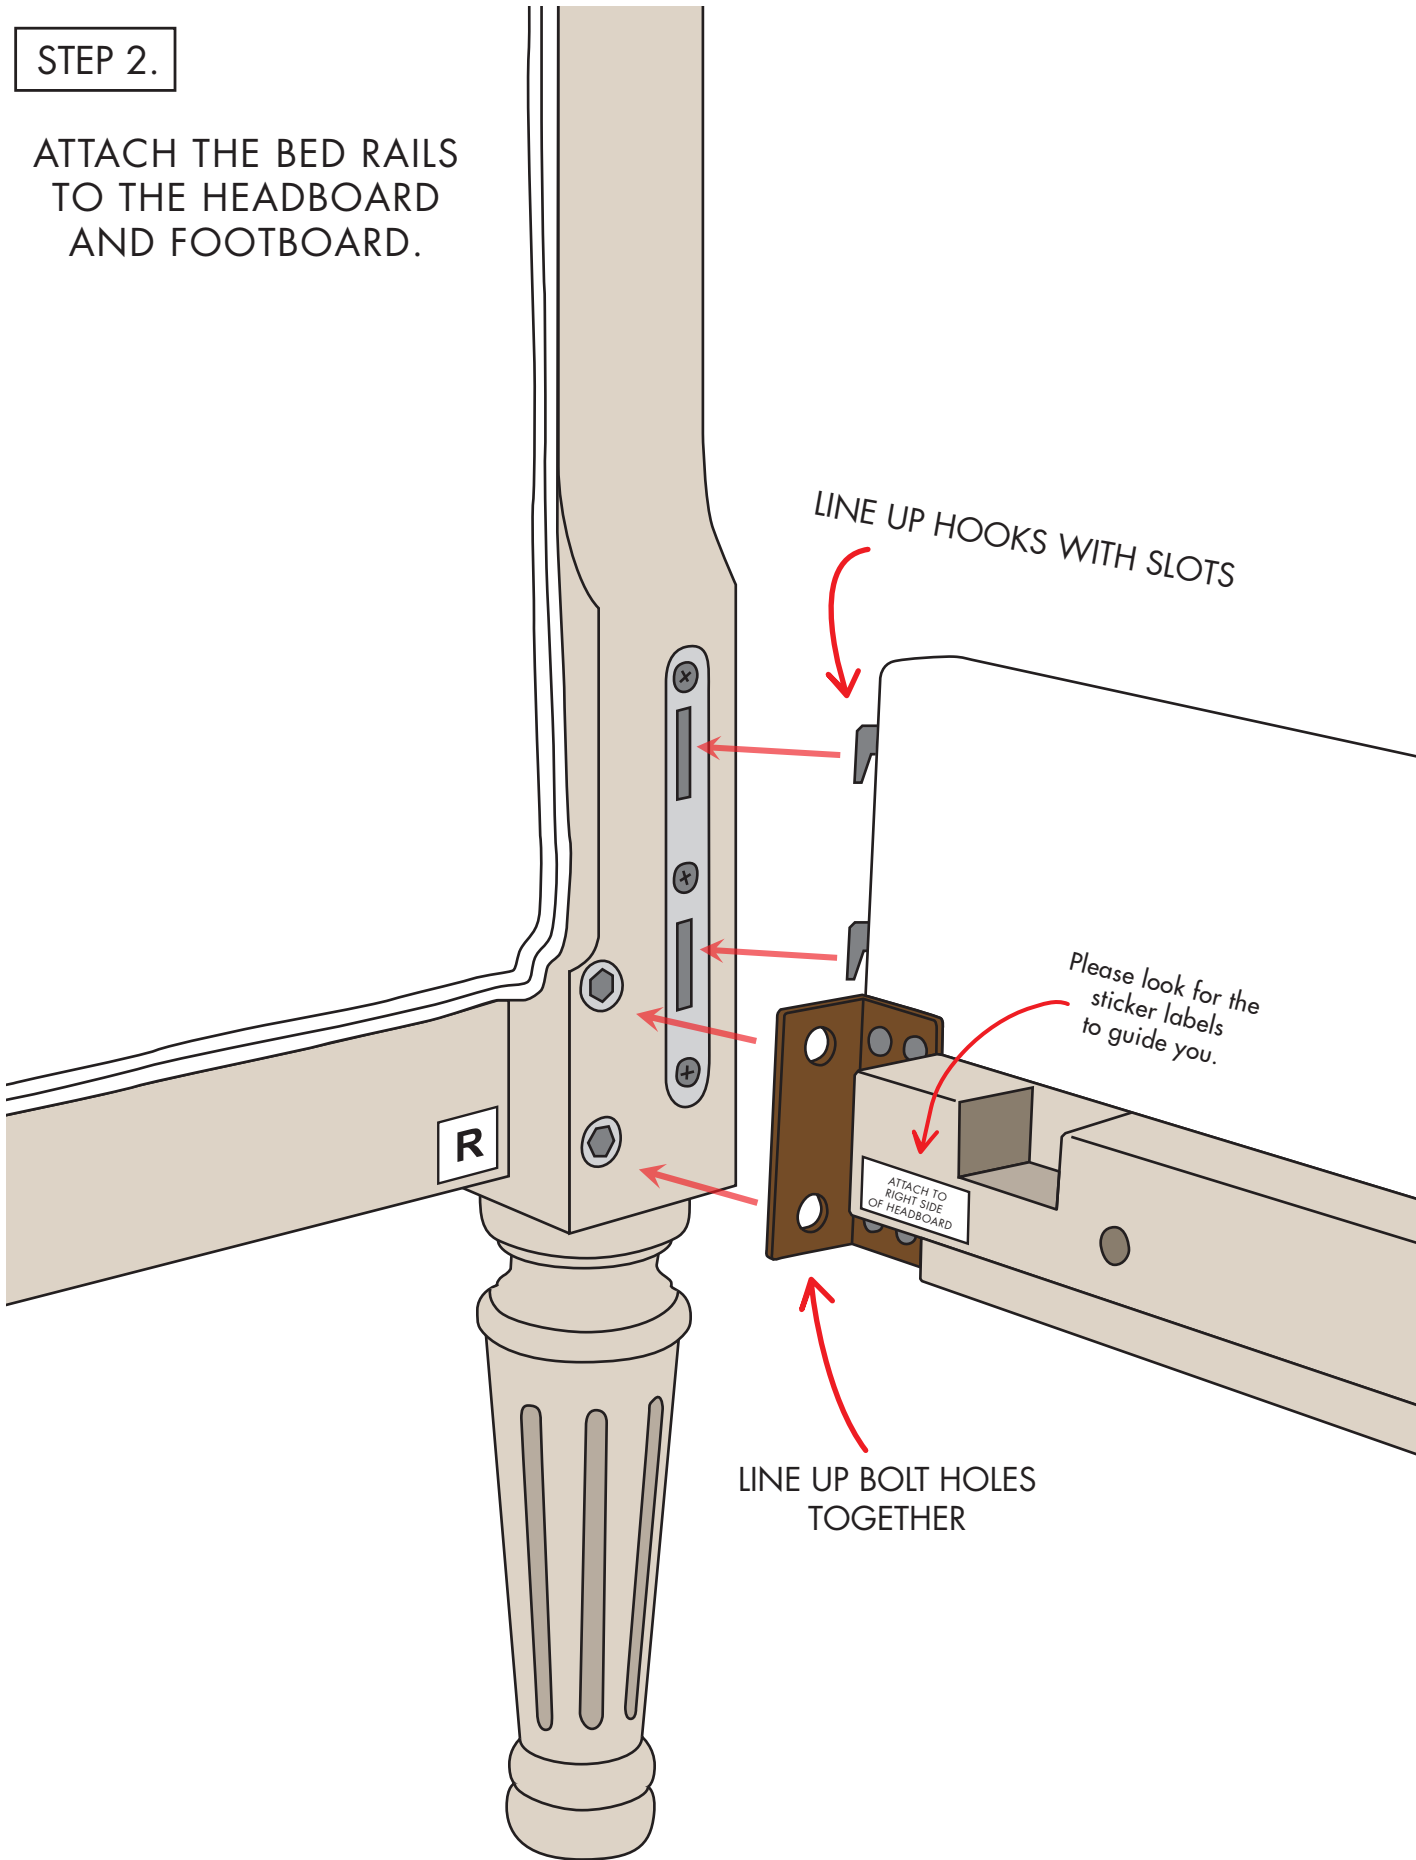

STEP 3.

USE HEX WRENCHES
TO TIGHTEN BOLTS
AND SECURE BED RAILS
TO HEADBOARD
AND FOOTBOARD.

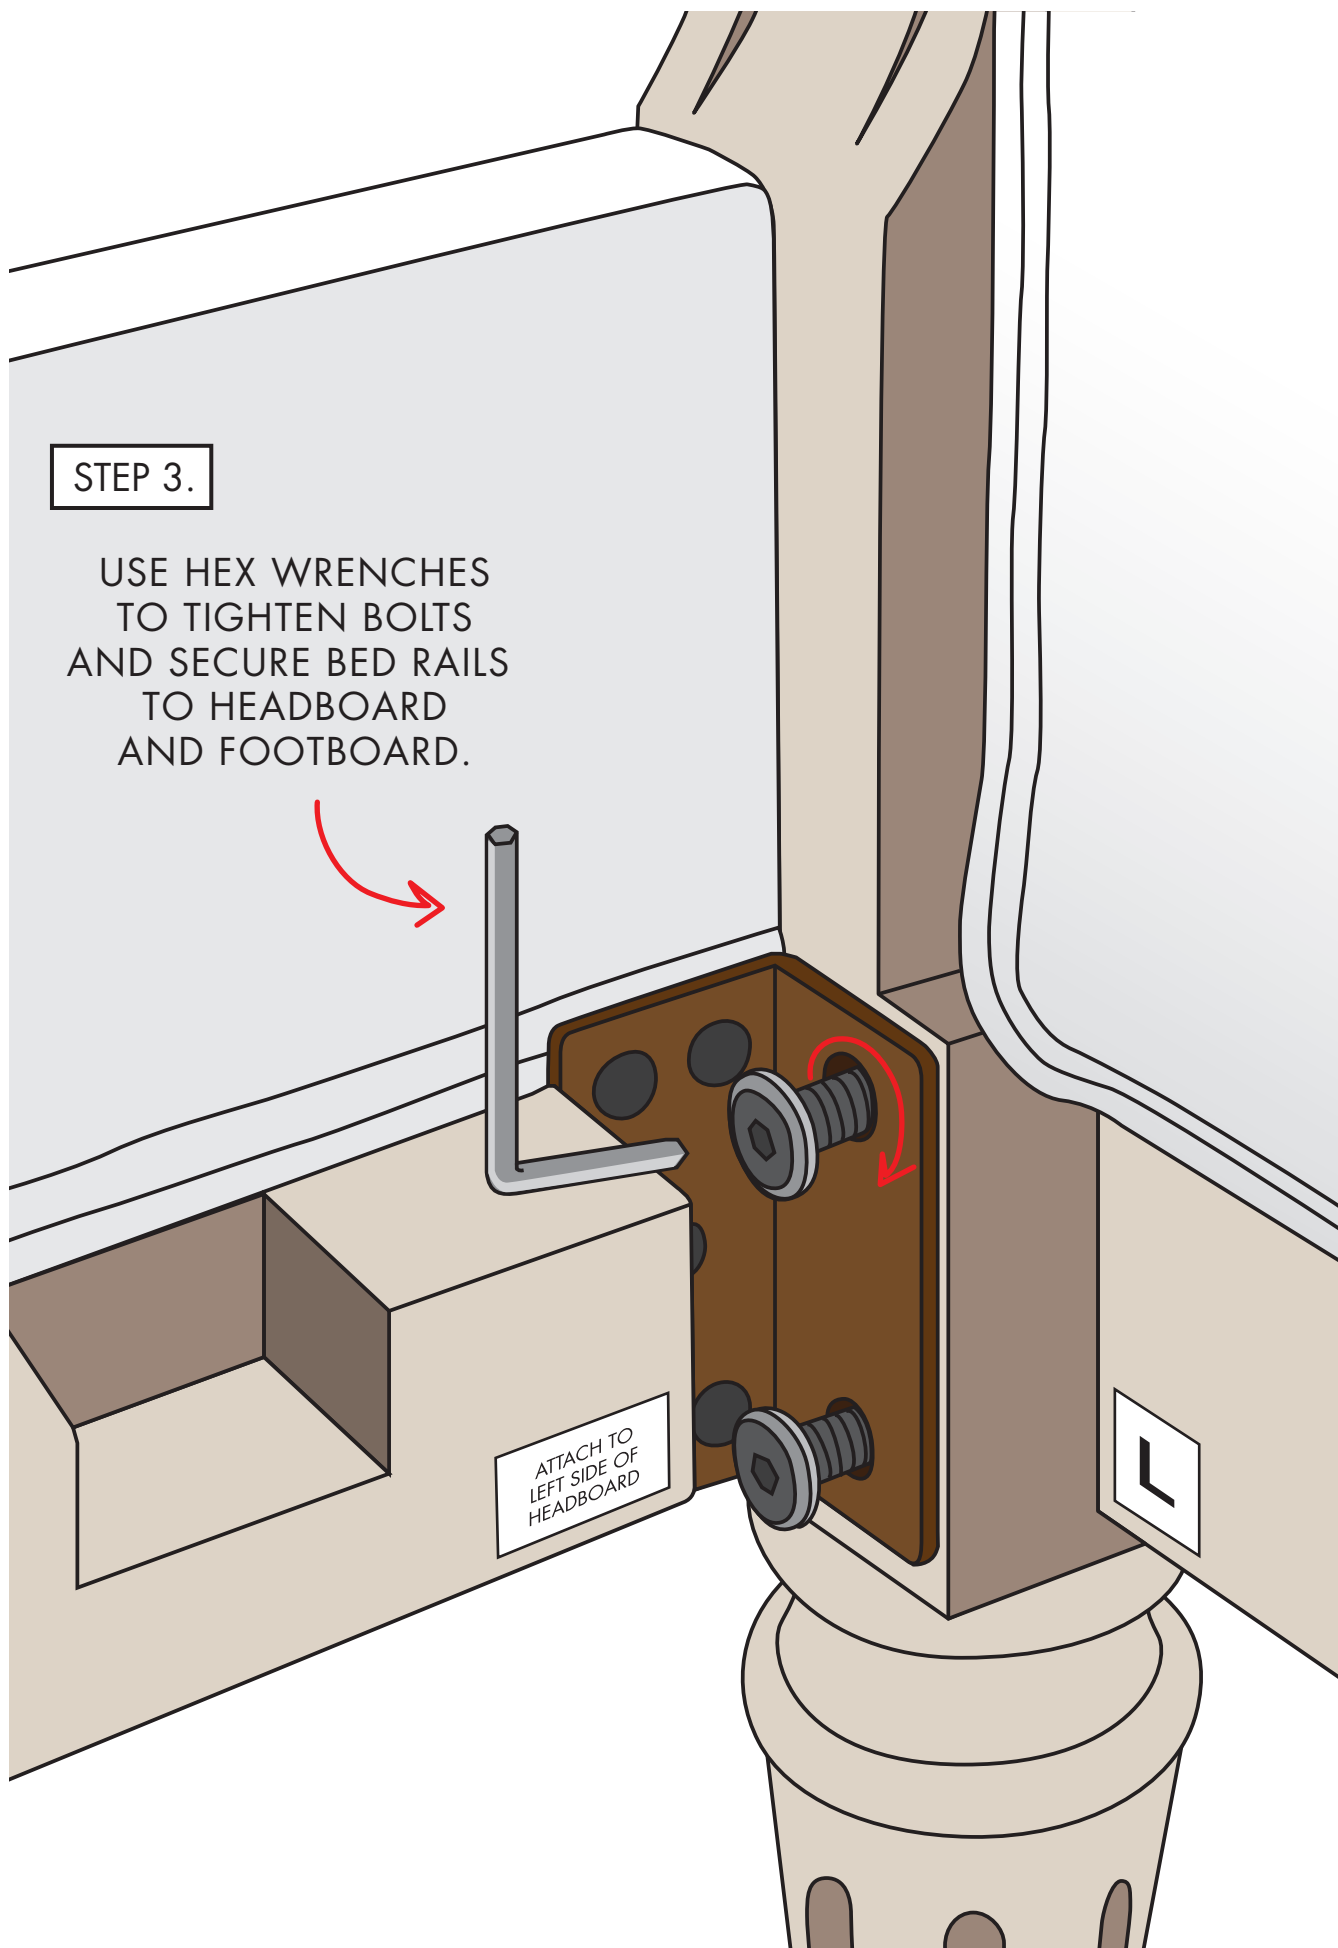


STEP 4.


ONCE RAILS ARE ATTACHED SECURELY TO BED FRAME,
INSERT MATTRESS SUPPORT SLATS INTO BASE.

6 x "T" SLATS

1 x STRAIGHT SLAT



PLACE "T" SLATS
BEGINNING AT
HEADBOARD

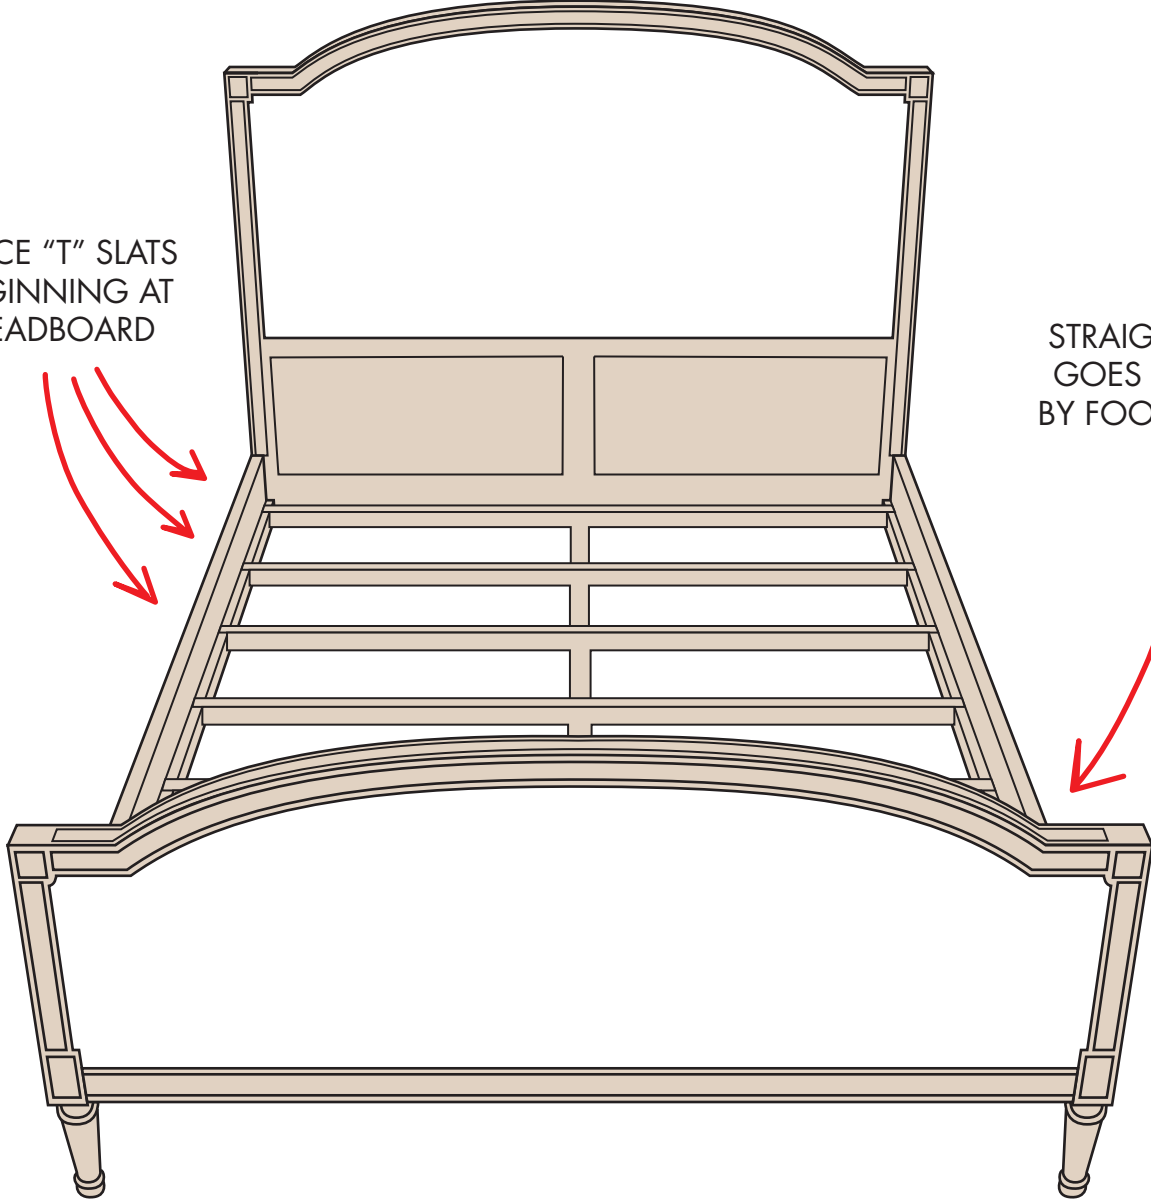


STRAIGHT SLAT
GOES AT END
BY FOOTBOARD

STEP 5.

FINAL STEP:
SCREW FINIALS INTO TOP OF BED CORNERS.

SCREW IN UNTIL
BOTTOM OF FINIAL
RESTS GENTLY ON TOP
OF BED.

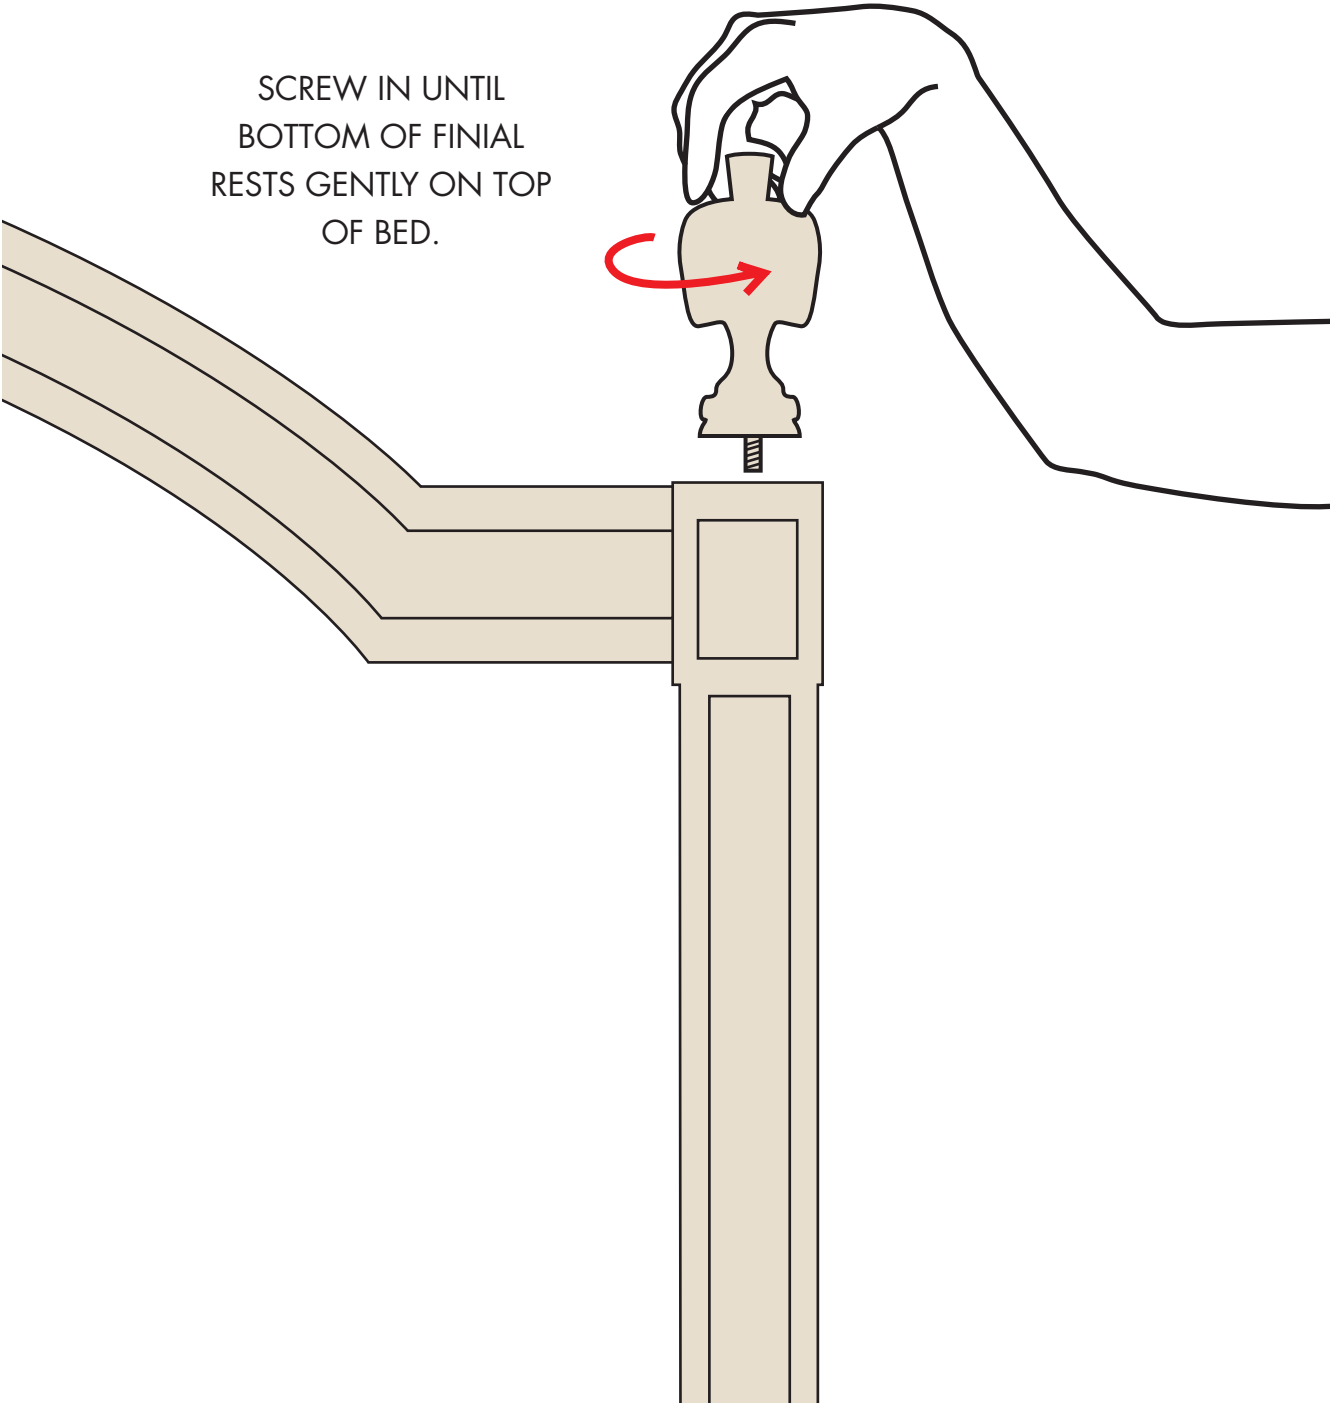

CARE INSTRUCTIONS

For best results, please consult a professional upholstery cleaner. Hardware may loosen overtime, periodically check connections and re-tighten if necessary.



ELOQUENCE®
Maison Fondée en 2002

WWW.ELOQUENCE.COM
3601 Holdrege Ave.
Los Angeles, CA 90016
T: 310-876-0661 F: 310-876-0667
E: INFO@ ELOQUENCE.COM