




ELOQUENCE®

Maison Fondée en 2002

FIORE BED

Assembly Instructions & Care

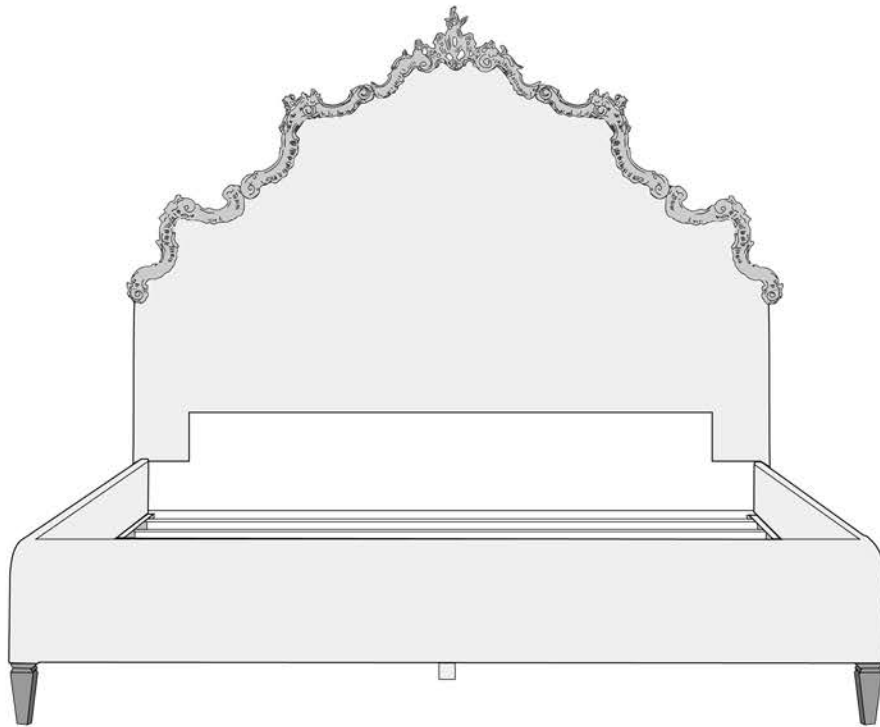


PLEASE NOTE:

*You will find assembly easier with two people!

*Please read up to Step 8 before beginning assembly.


LIST OF ELOQUENCE® FIORE BED PARTS

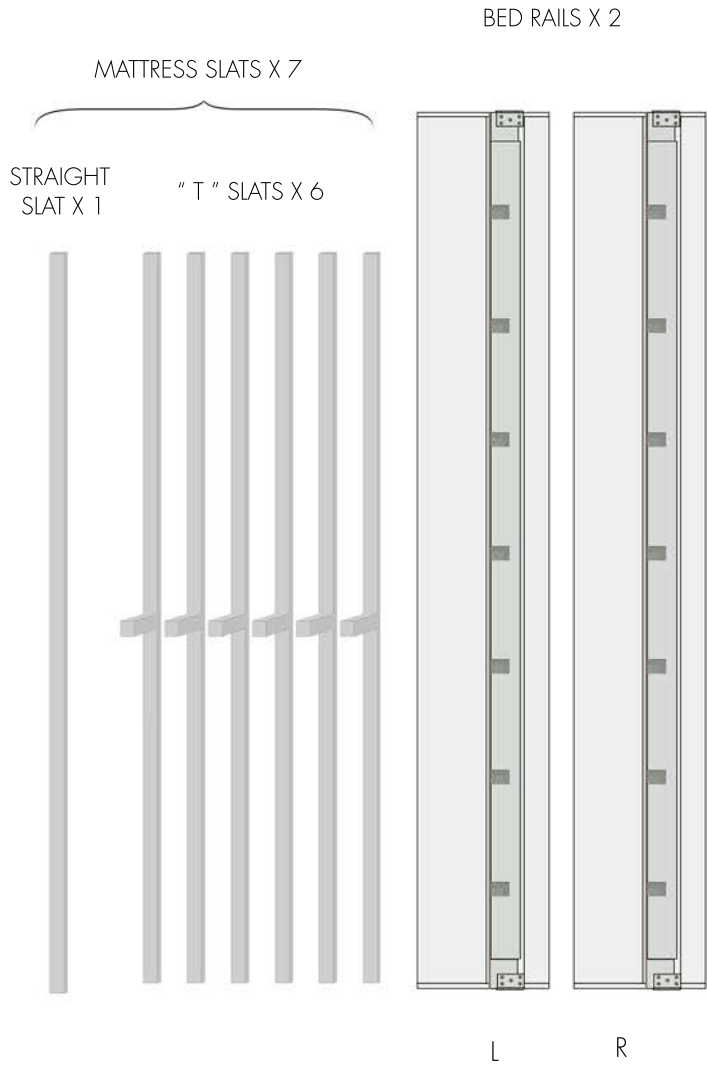


HEADBOARD CARVINGS X 5



HEADBOARD

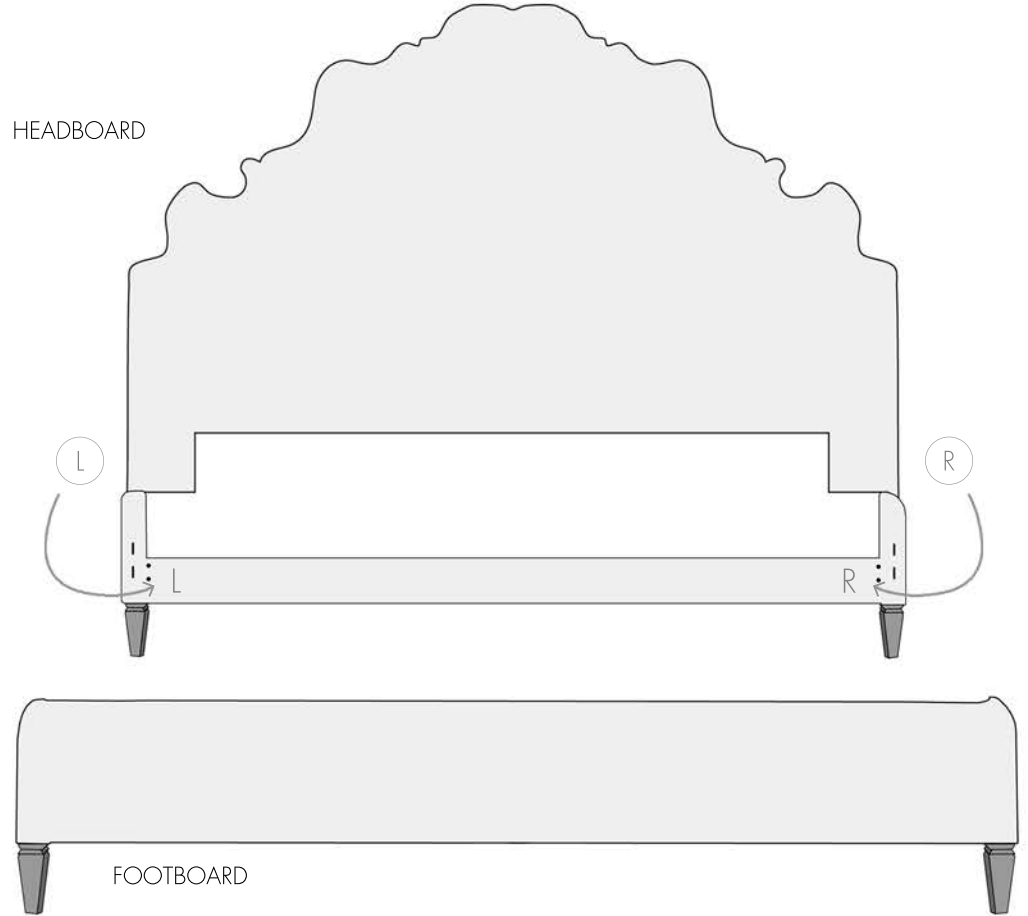

BED RAIL BOLTS
AND WASHERS X 8



HEADBOARD CROWN
BOLTS X 16



2 X HEX WRENCHES




(SIZE 5/32 ALLEN)

STEP 1.

LINE UP THE HEADBOARD AND FOOTBOARD WITH THE LEFT AND RIGHT BED RAILS.

Please look for the " L " (Left) & " R " (Right) imprint stamps on each piece to guide you.

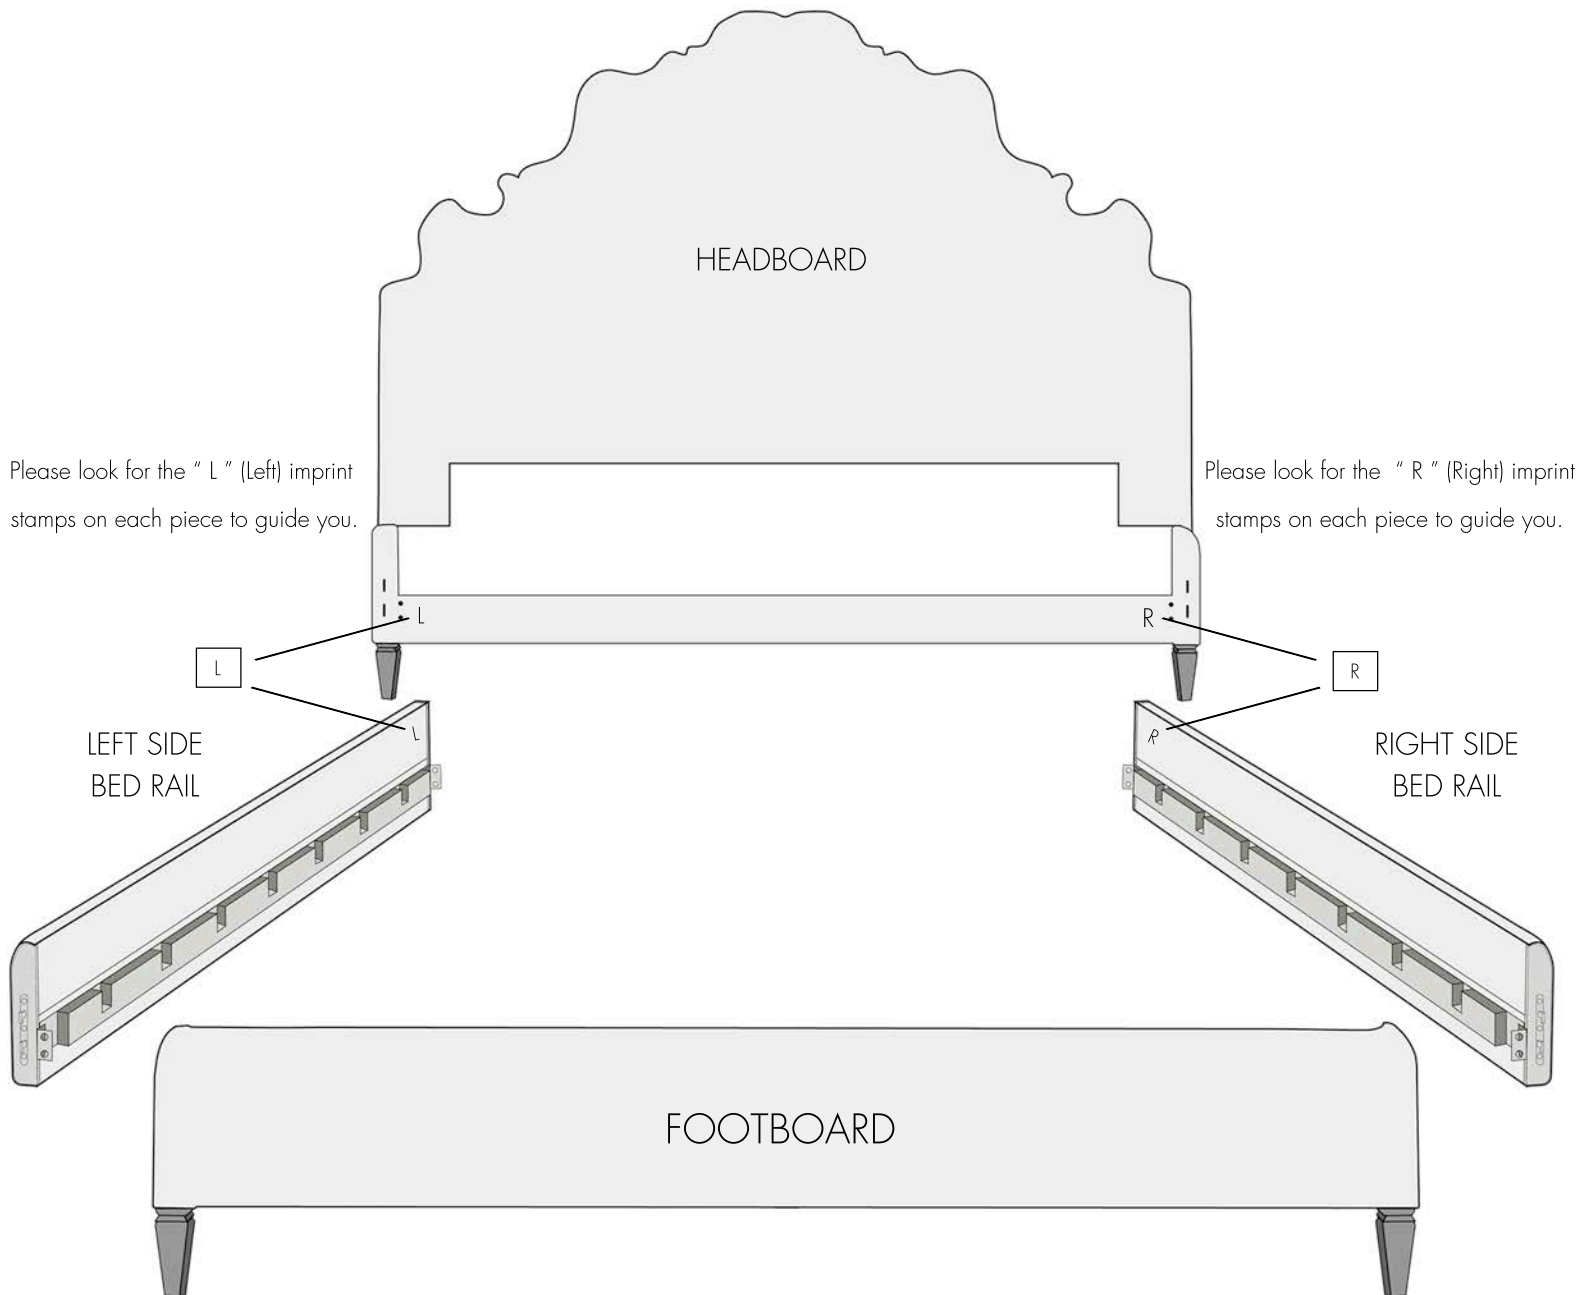

PLEASE NOTE:

*Bedrail imprints also include number from the manufacturer but please disregard for assembly.

STEP 2.

ATTACH THE BED RAILS TO THE HEADBOARD AND FOOTBOARD.

LINE UP HOOKS WITH SLOTS

LINE UP BOLT HOLES TOGETHER




LEFT SIDE BED RAIL

Please look for the " L " & " R " imprint stamps on each piece to guide you.


REPEAT FOR RIGHT SIDE BED RAIL.

Please look for the " L " (Left) & " R " (Right) imprint stamps on each piece to guide you.

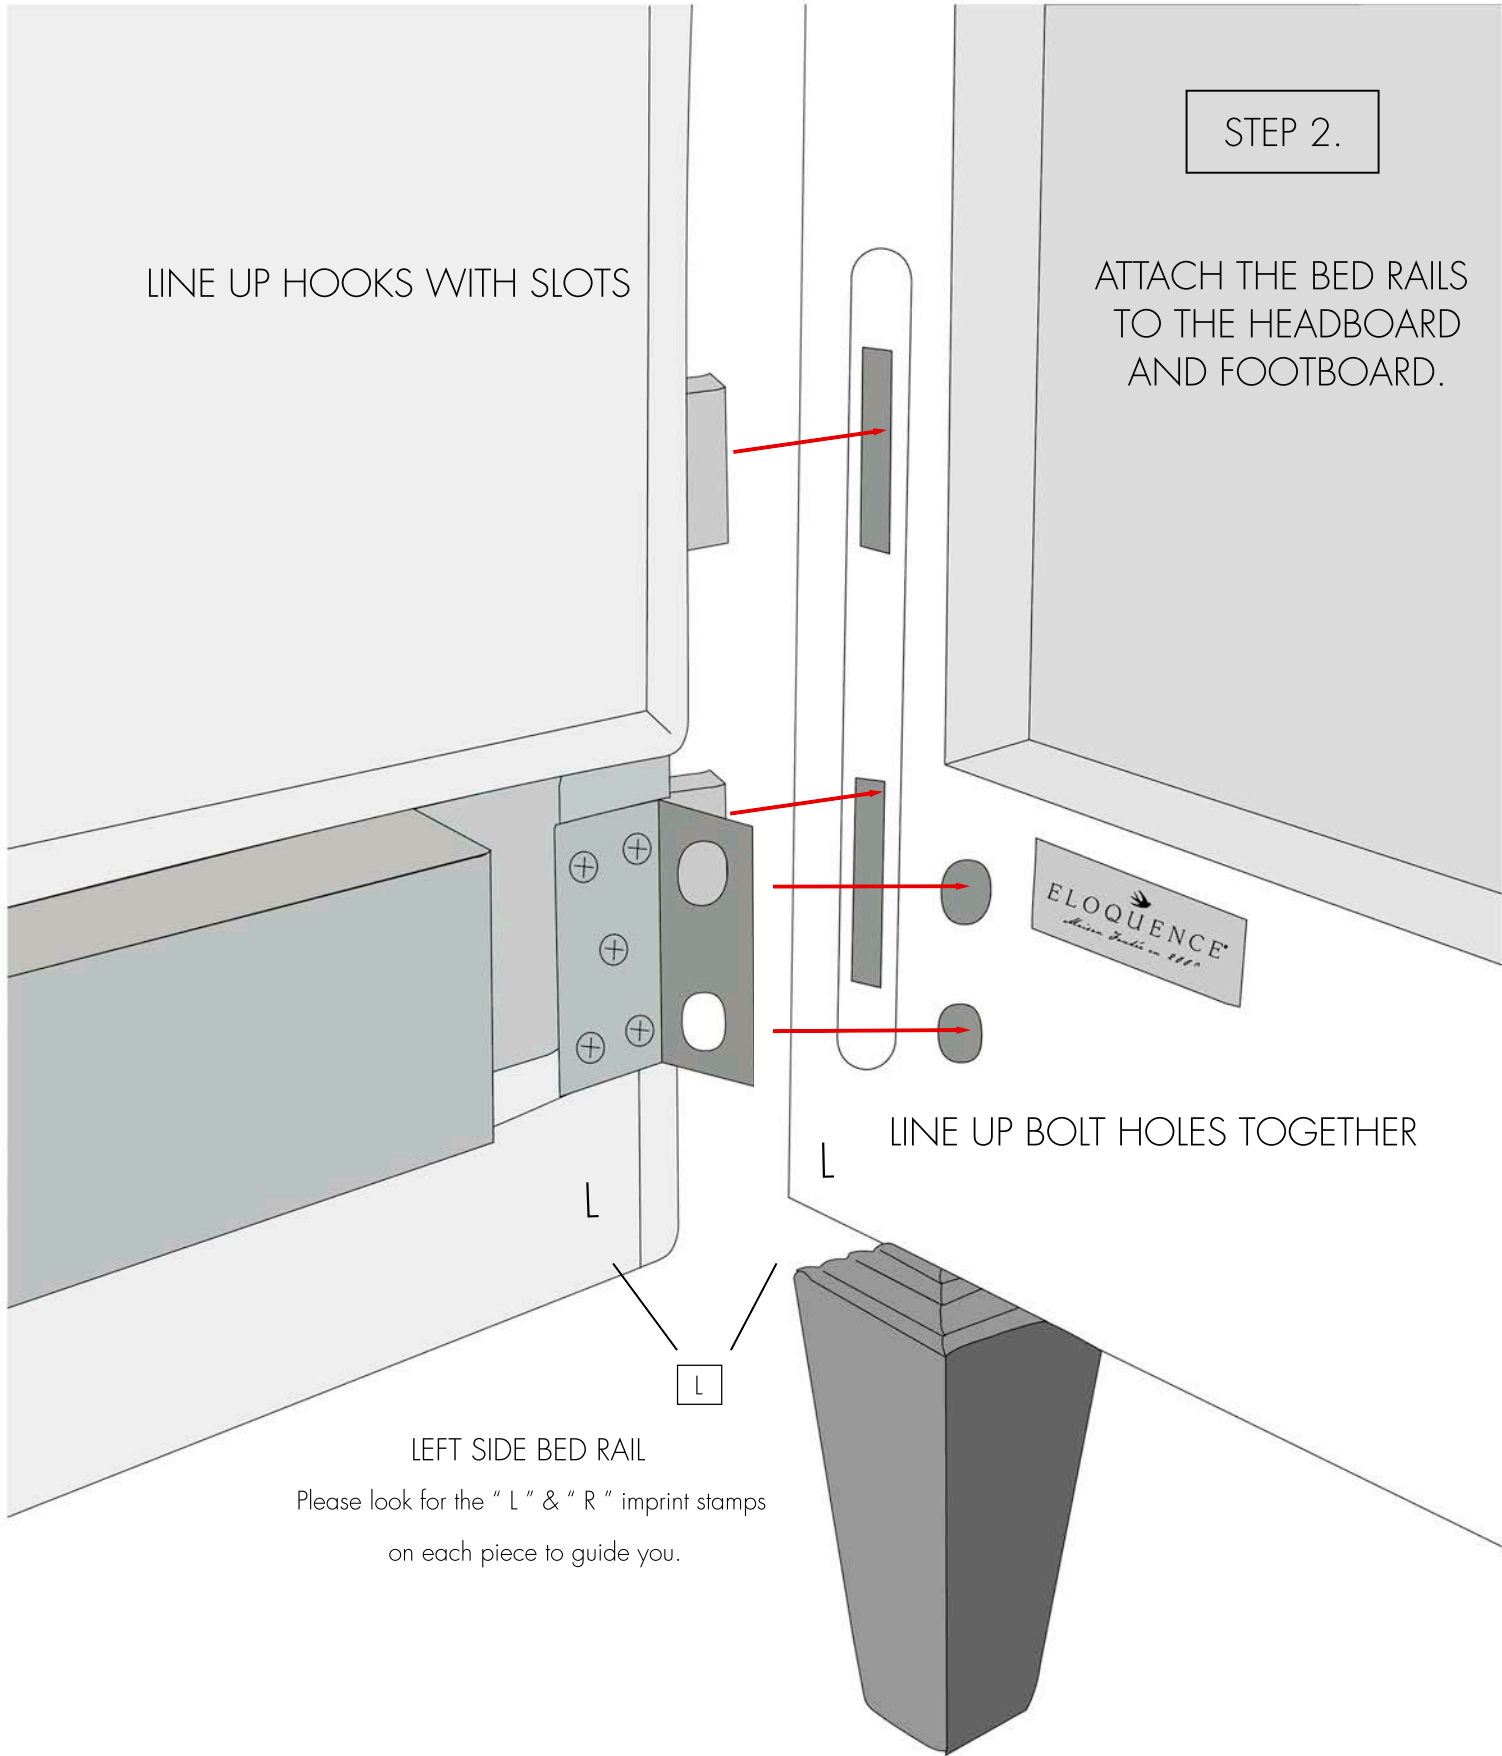

STEP 3.

PLACE BOLT WITH WASHER IN BOLT HOLE. USE HEX WRENCH TO TIGHTEN BOLTS AND WASHERS TO SECURE BED RAILS TO HEADBOARD AND FOOTBOARD

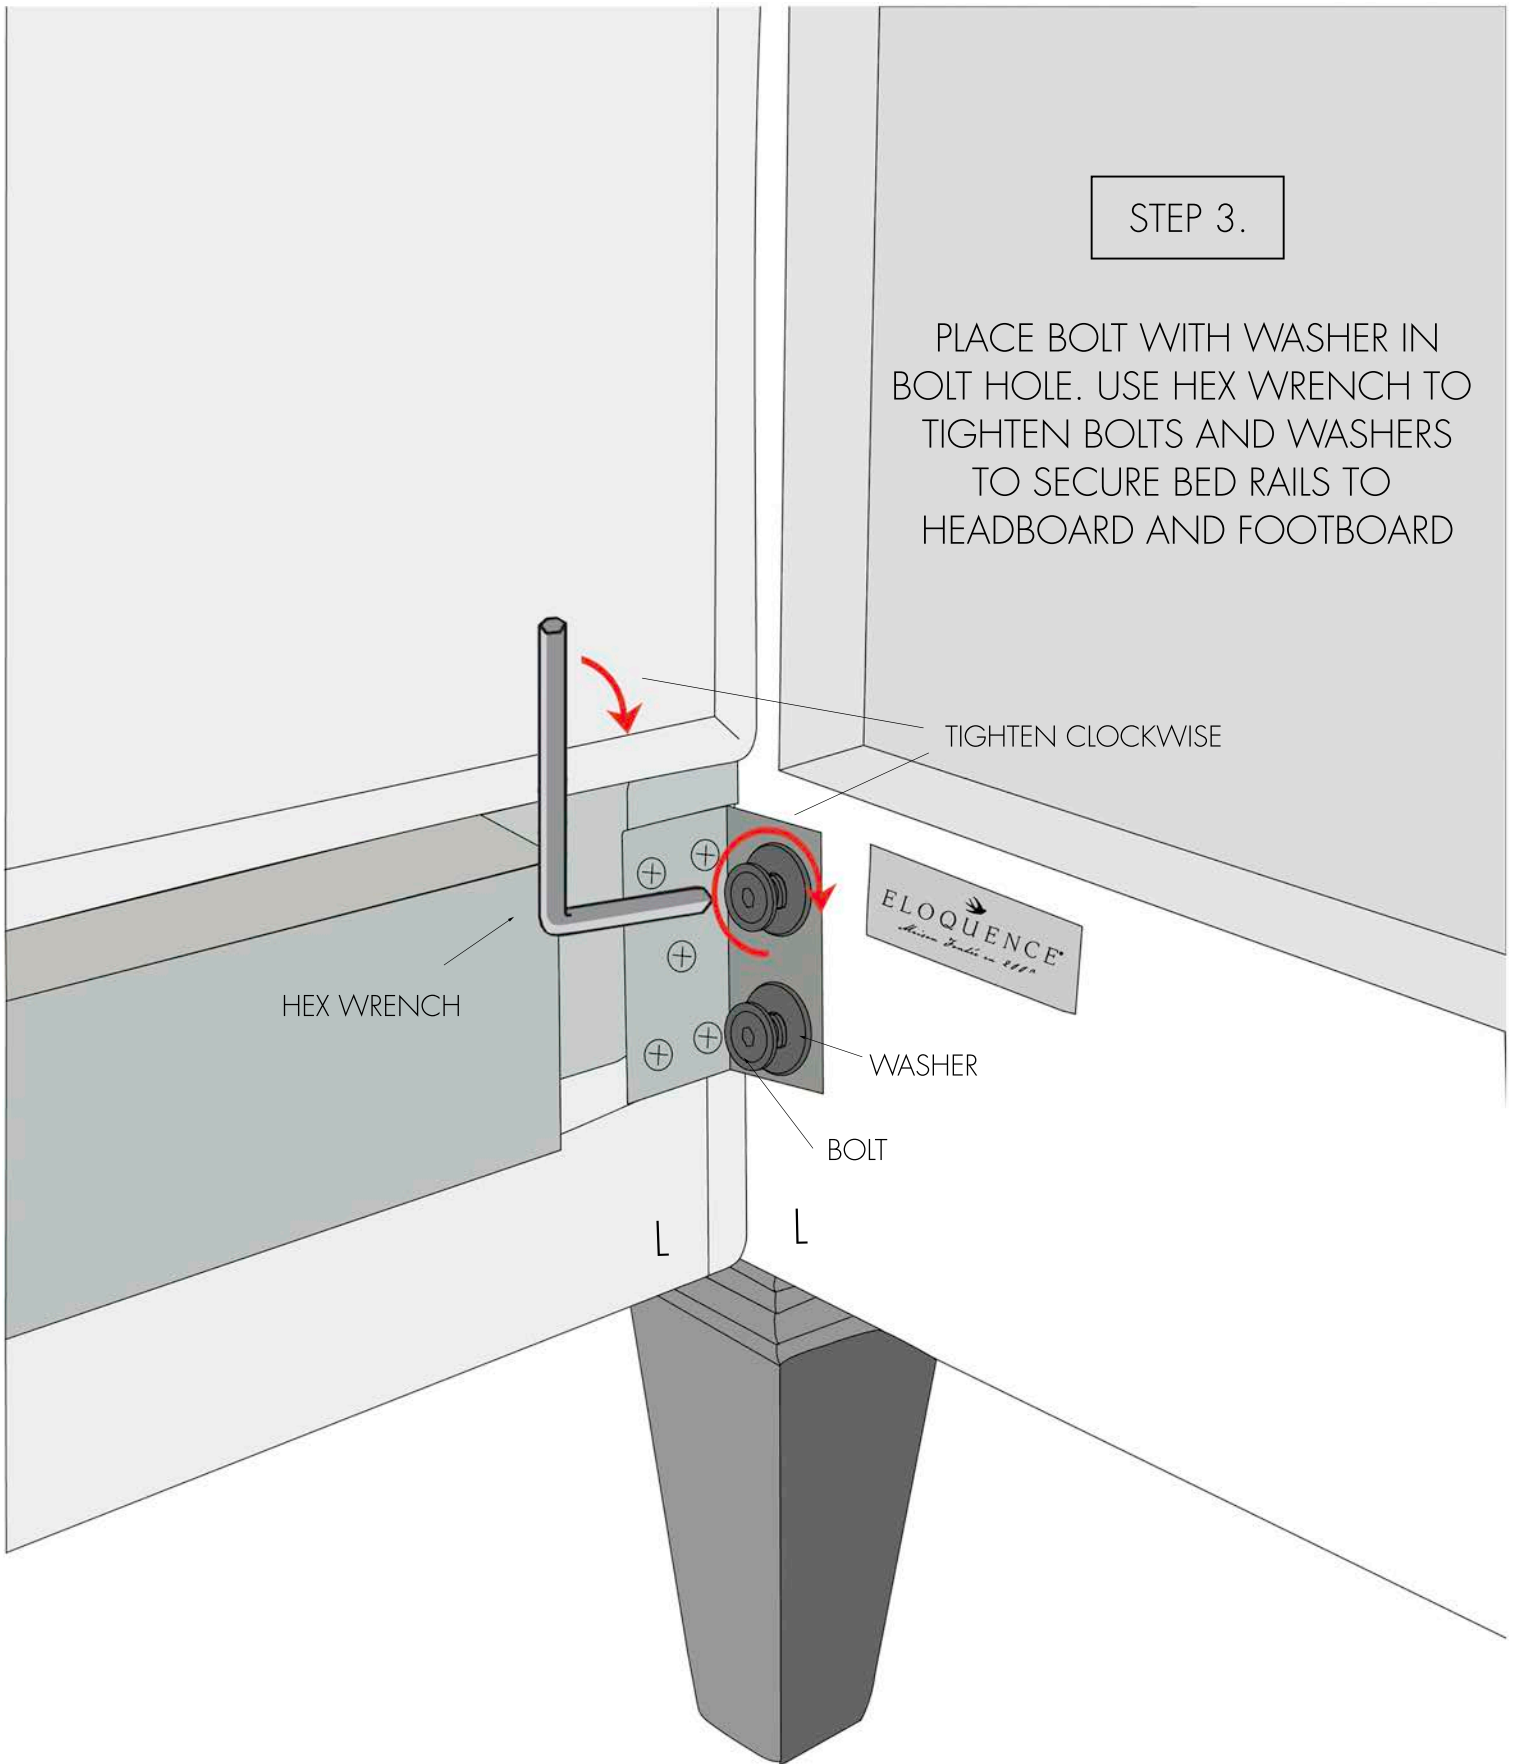

REPEAT FOR RIGHT SIDE BED RAIL.

Please look for the " L " (Left) & " R " (Right) imprint stamps on each piece to guide you.

STEP 4.


ONCE RAILS ARE ATTACHED SECURELY TO BED FRAME,
INSERT MATTRESS SUPPORT SLATS INTO BASE.



6 X " T " SLATS
PLACE STARTING AT HEADBOARD



1 X STRAIGHT SLAT
PLACE BY FOOTBOARD

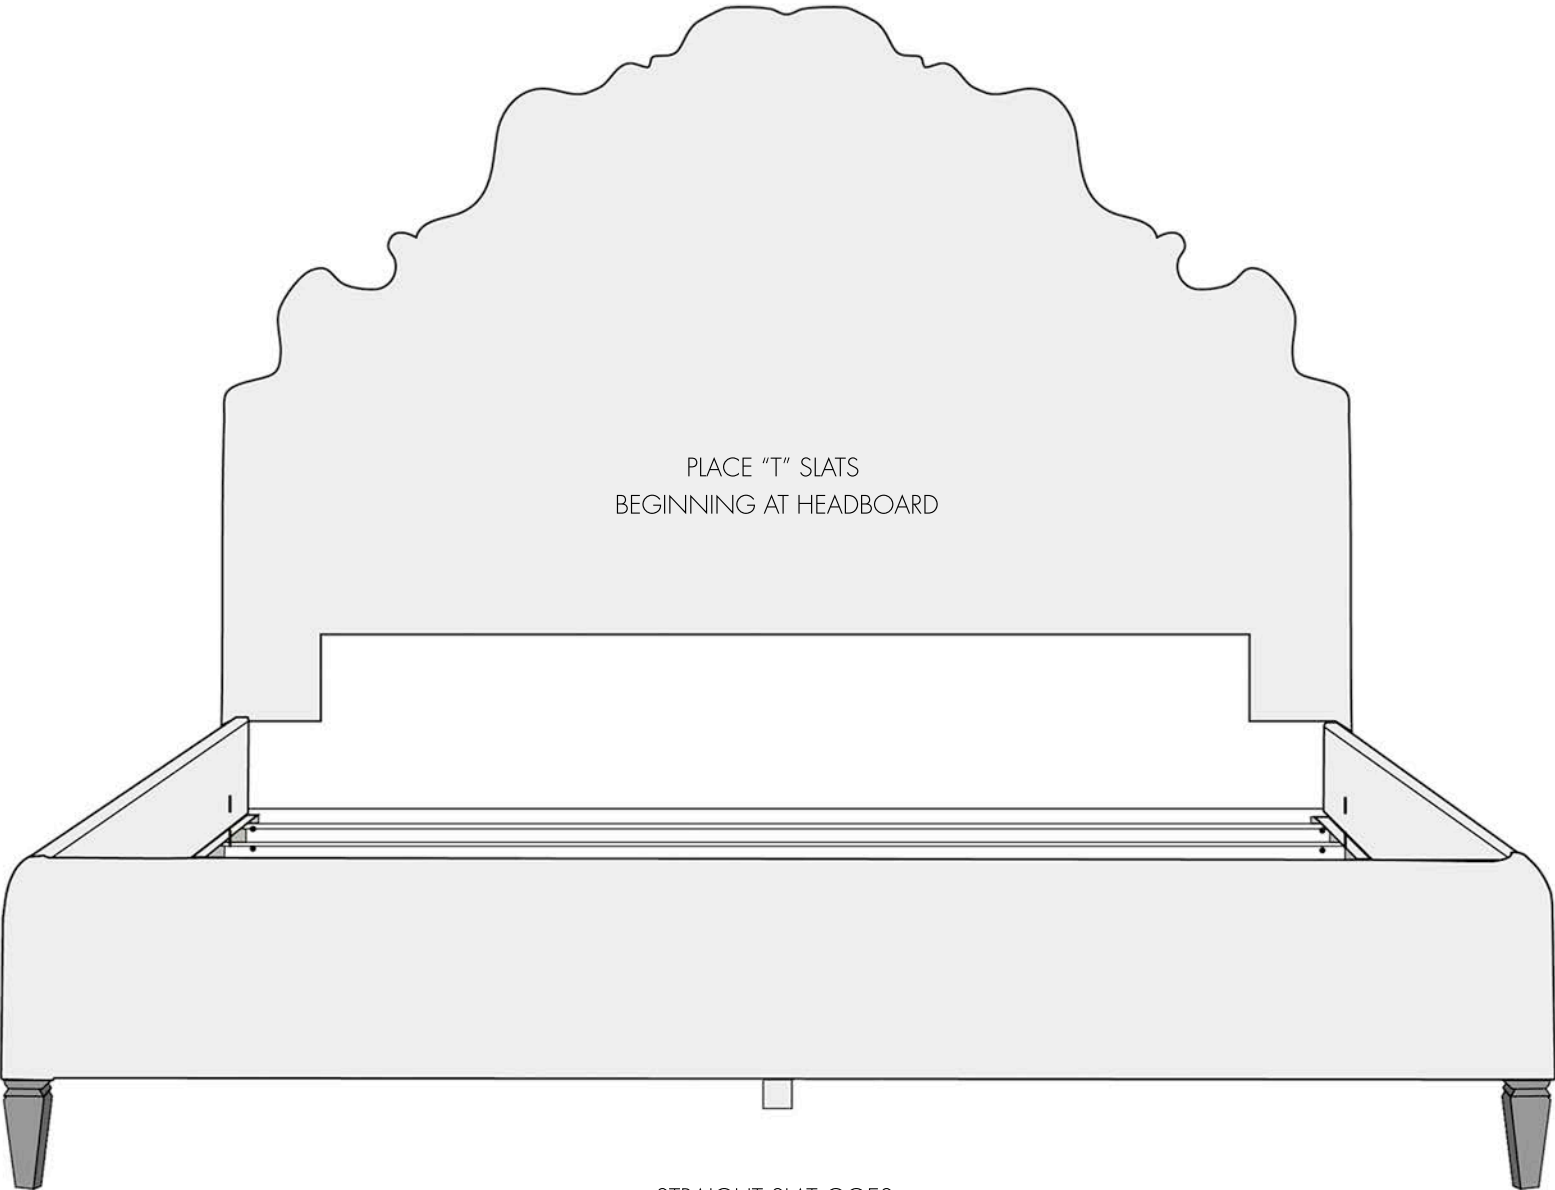


STRAIGHT SLAT GOES
AT END BY FOOTBOARD


STEP 5.

ARRANGE HEADBOARD CROWN PIECES IN ALPHABETICAL ORDER FROM A TO E TO THE SIDE OF THE BED OR ON A TABLE, BEFORE BEGINNING TO ATTACH.

LOOK FOR THE SMALL, STAMPED, INDENTED LETTERS ON THE BACK OF THE CROWN CARVED PIECES

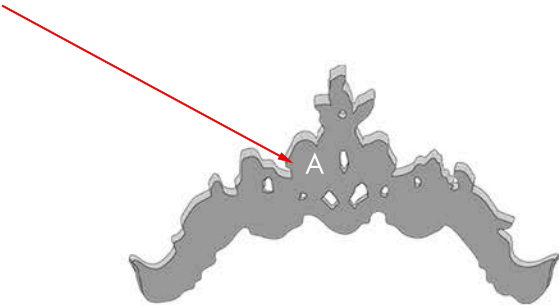


ARRANGE HEADBOARD CROWN PIECES IN THE ORDER BELOW.

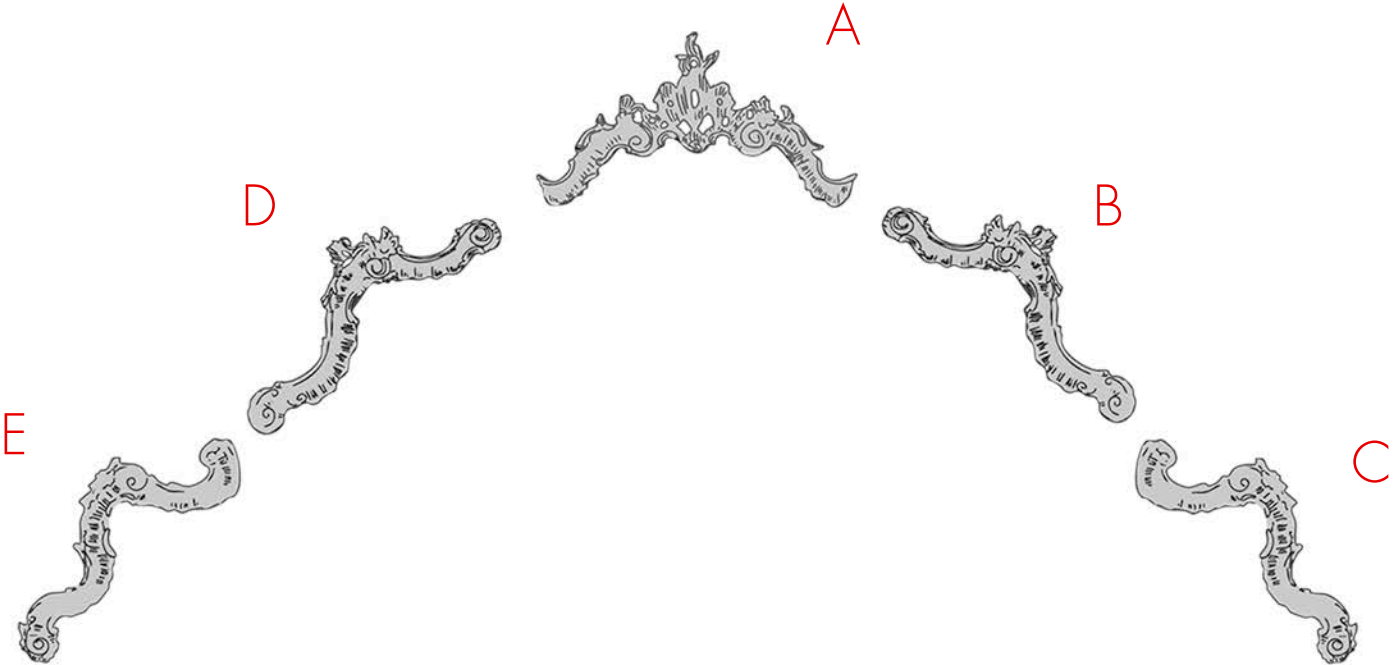

STEP 6.


STARTING WITH THE CROWN OR " A " PIECE, CAREFULLY LINE
THE PIECE ON THE HEADBOARD TO ATTACH
TO THE BACK OF THE HEADBOARD

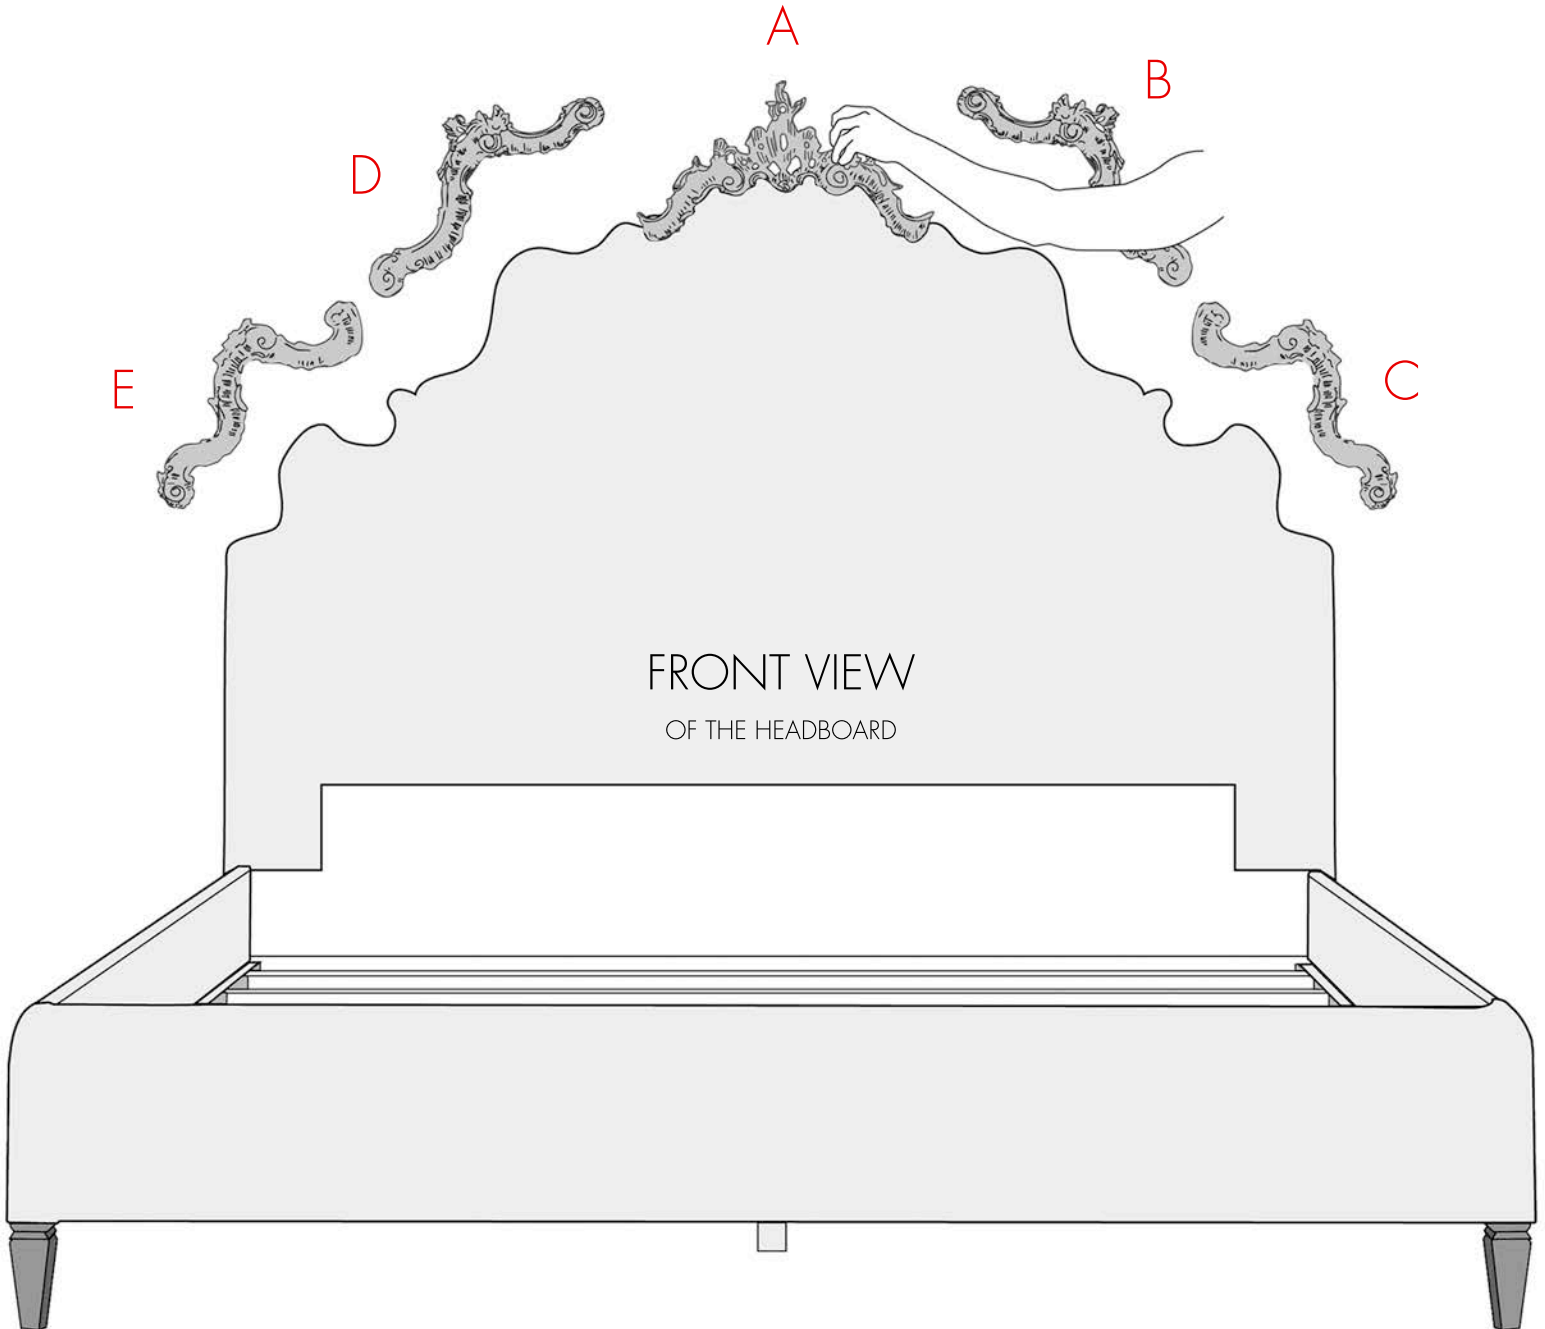


STEP 7.

FOR THE MOST OPTIMAL ASSEMBLY, INSTALL BOLTS IN THE NUMERICAL ORDER SHOWN BELOW.

ATTACH THE 16 BOLTS IN NUMERICAL ORDER TO SECURE EACH CARVED PIECE TO THE HEADBOARD.

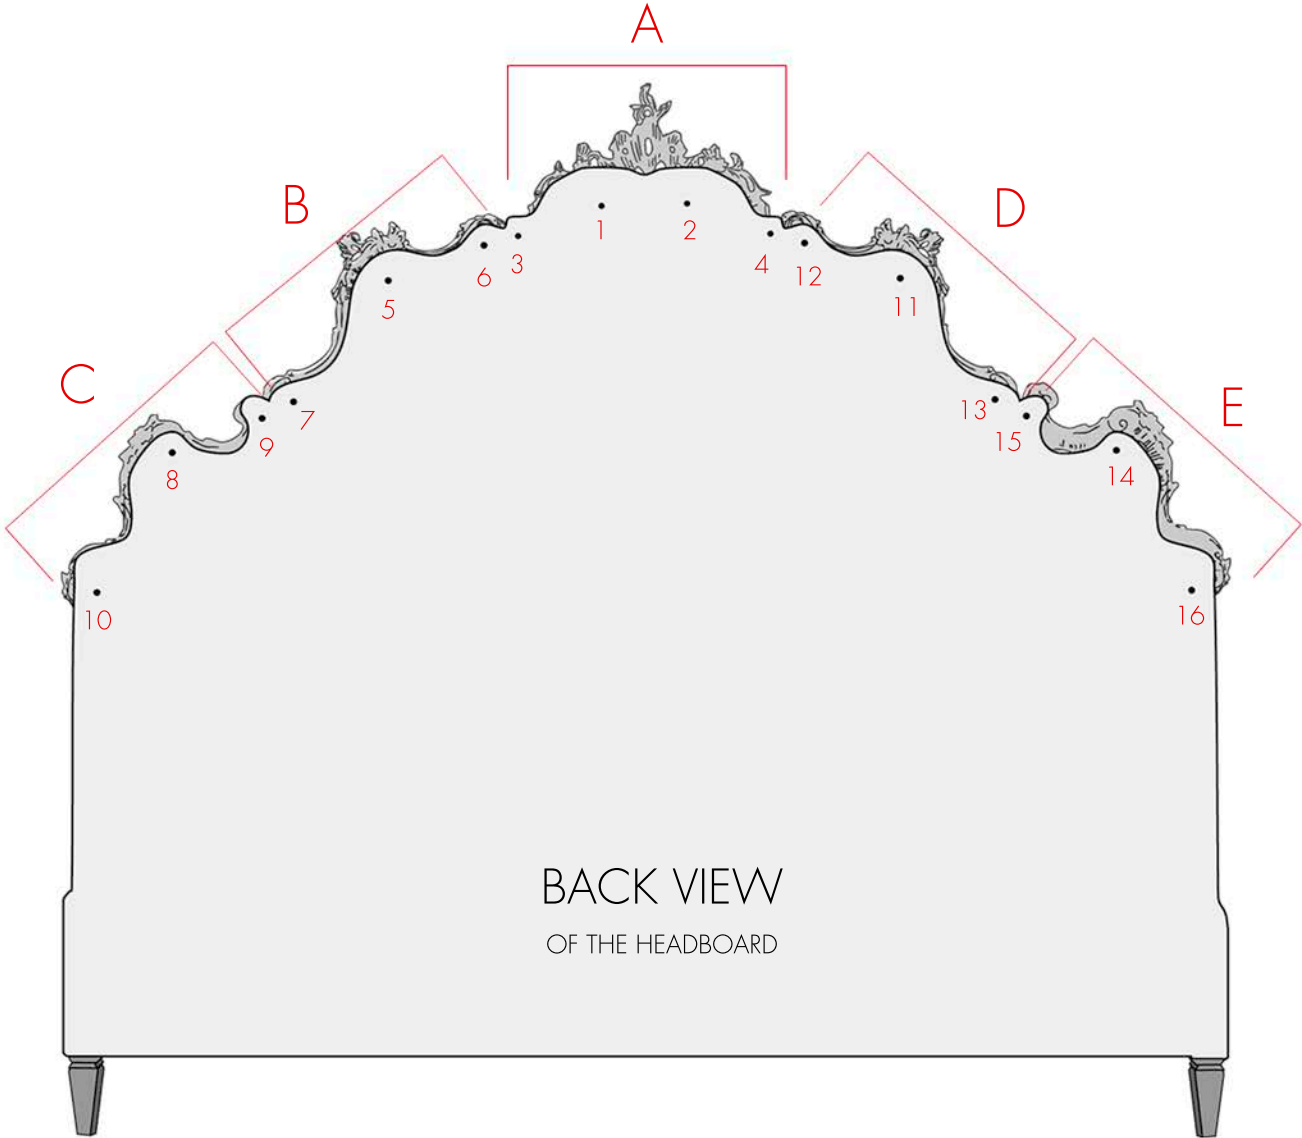

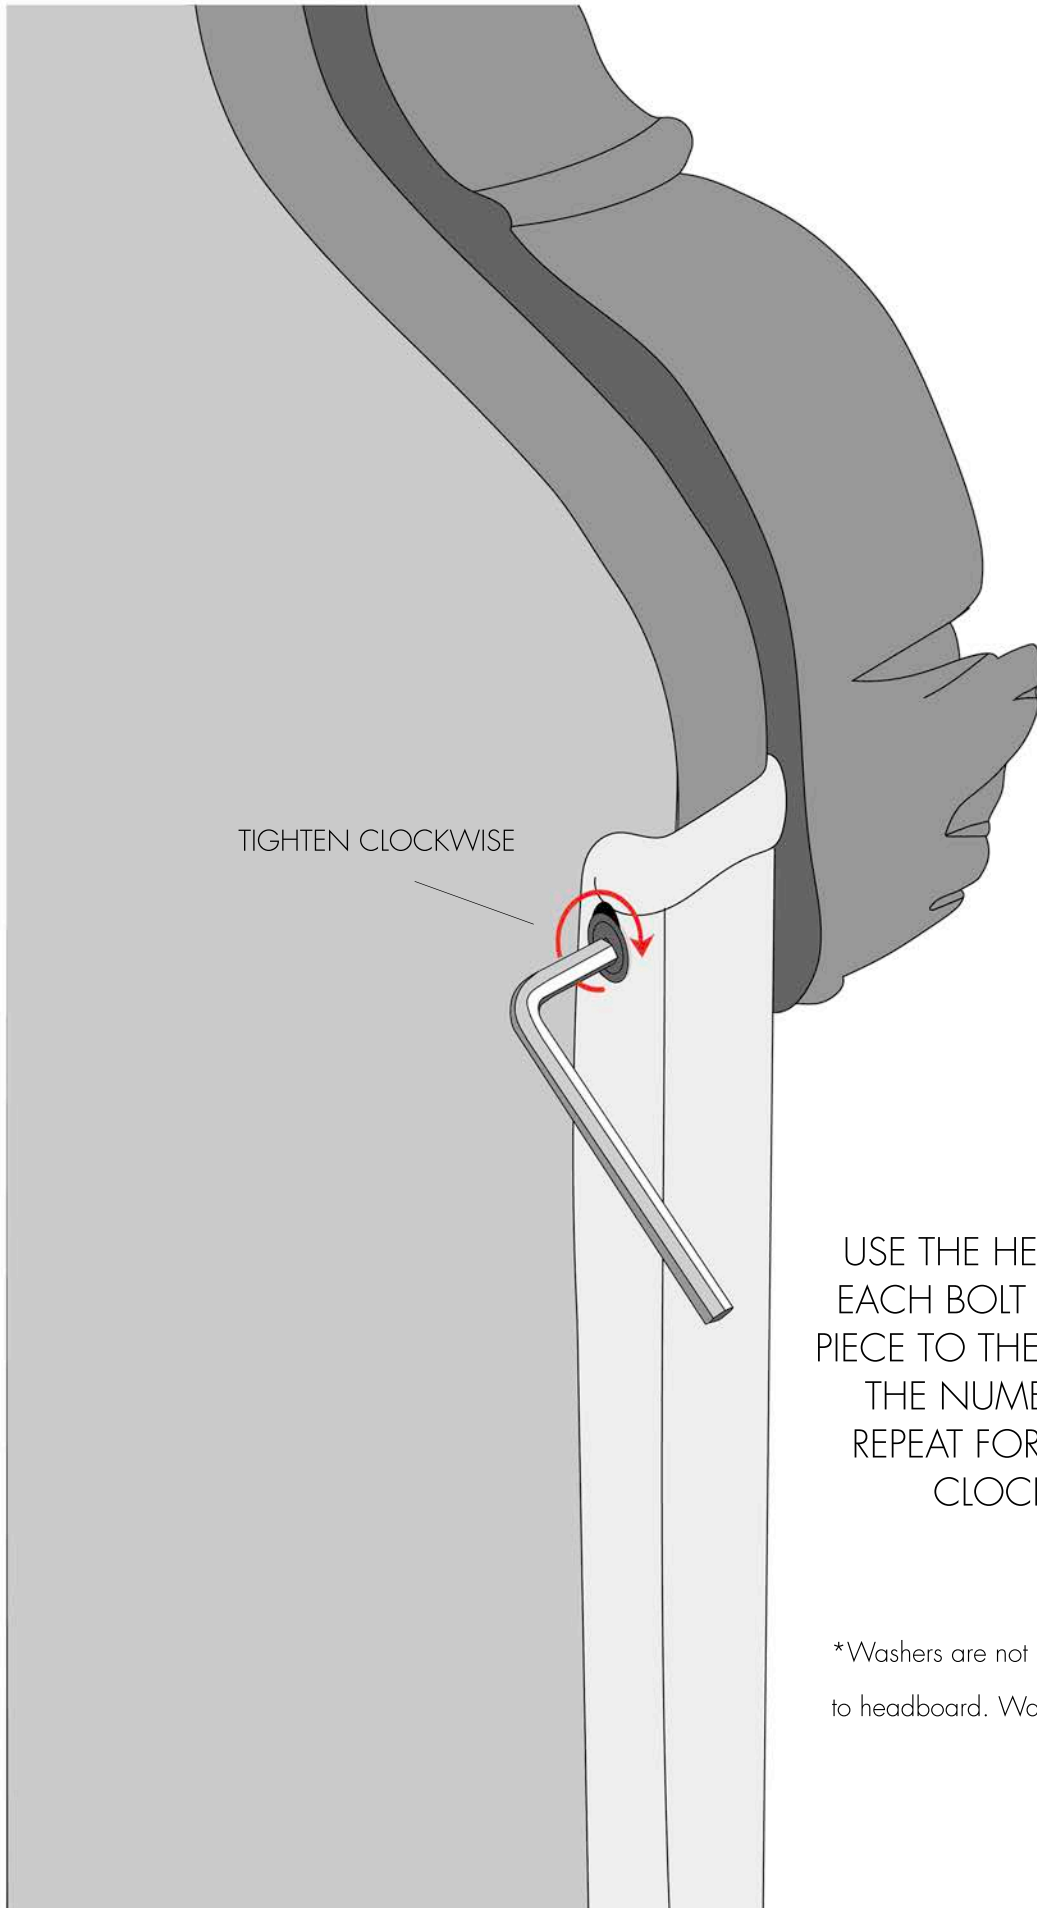

STEP 8.

USE THE HEX WRENCH TO TIGHTEN EACH BOLT SECURING EACH CARVED PIECE TO THE HEADBOARD FOLLOWING THE NUMERICAL ORDER IN STEP 7. REPEAT FOR ALL 16 BOLTS, TURNING CLOCKWISE TO TIGHTEN.


PLEASE NOTE:

*Washers are not needed with bolts for attaching carvings to headboard. Washers are only for use at base side rails.

CARE INSTRUCTIONS

Store your hex wrench and copy of instructions in a safe place for easy disassembly & reassembly.

If you misplace your hex wrench, use a 5/32 Allen wrench or a T25 Torx wrench (star type) from the hardware store to build.

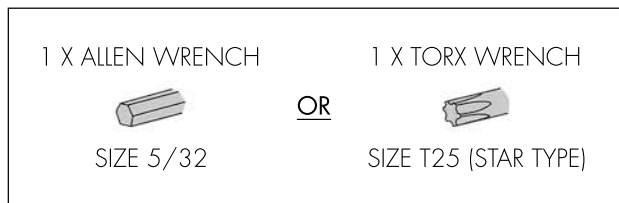

For best cleaning results, please consult a professional upholstery cleaner.

This Eloquence® piece has been thoughtfully designed in Los Angeles and is inspired by an authentic European antique. Every design is carefully hand-carved and hand-painted, composed start to finish by artisans devoted to their craft. We hope you enjoy your Eloquence® piece for years to come.


E L O Q U E N C E®
Maison Fondée en 2002

WWW.ELOQUENCE.COM
3601 Holdredge Ave.
Los Angeles, CA 90016
T: 310-876-0661 F: 310-876-0667
INFO@ELOQUENCE.COM