




ELOQUENCE®

Maison Fondée en 2002

DAUPHINE BED Assembly Instructions & Care

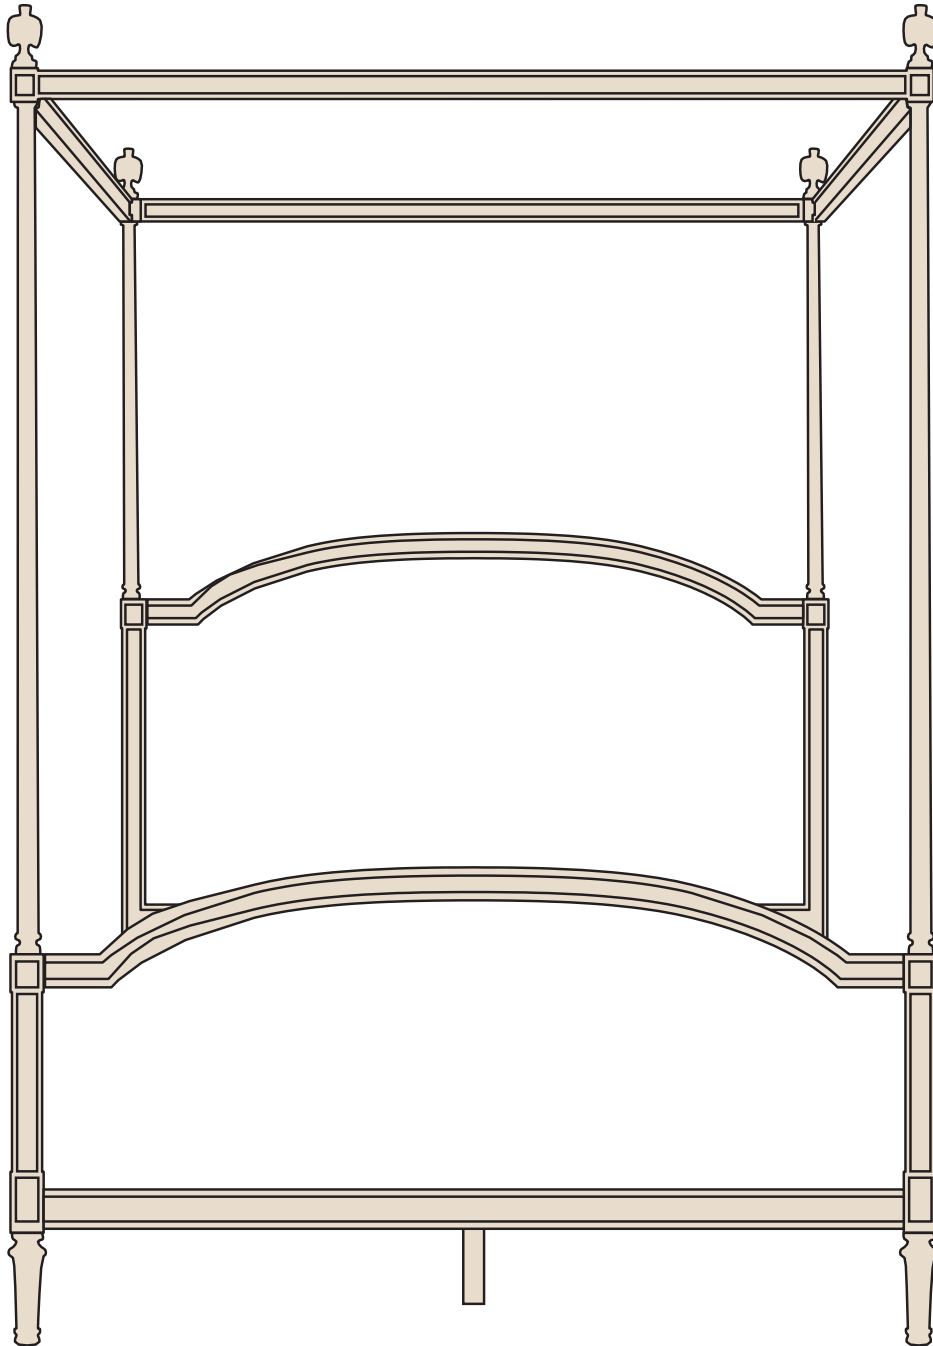

PLEASE NOTE:

You will need at least two people with stepstools and ladders for assembly!

LIST OF ELOQUENCE® DAUPHINE CANOPY BED PARTS

CANOPY RAILS

MATTRESS SLATS

BED RAILS x 2

HEADBOARD

CANOPY POSTS

LEFT & RIGHT x 2

FRONT & BACK x 2

FOOTBOARD POSTS x 2





HEADBOARD POSTS x 2

FOOTBOARD

FINIALS x 4


BED RAIL BOLTS x 8

HEX WRENCHES x 2

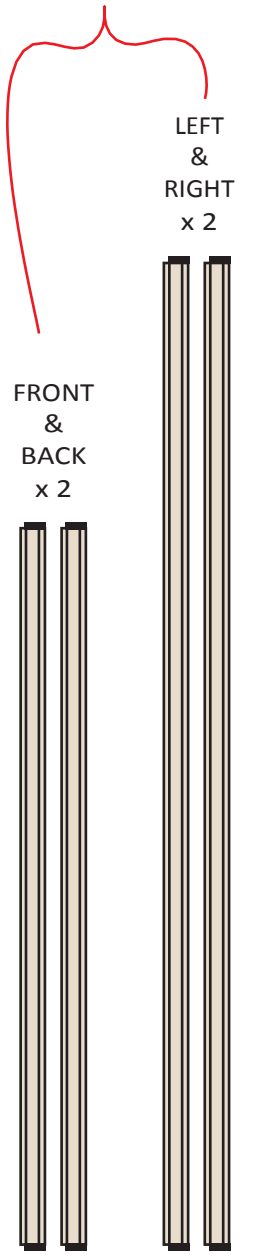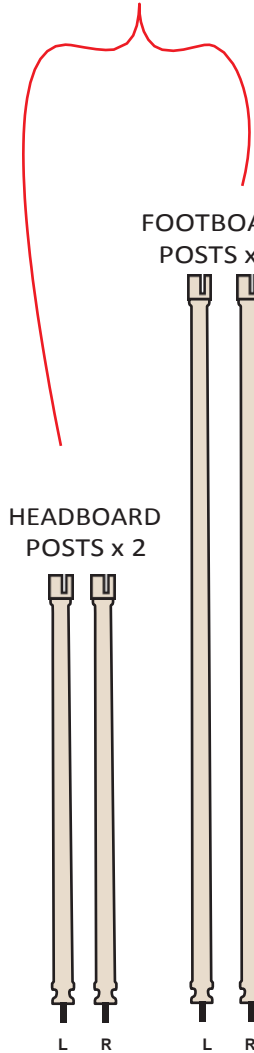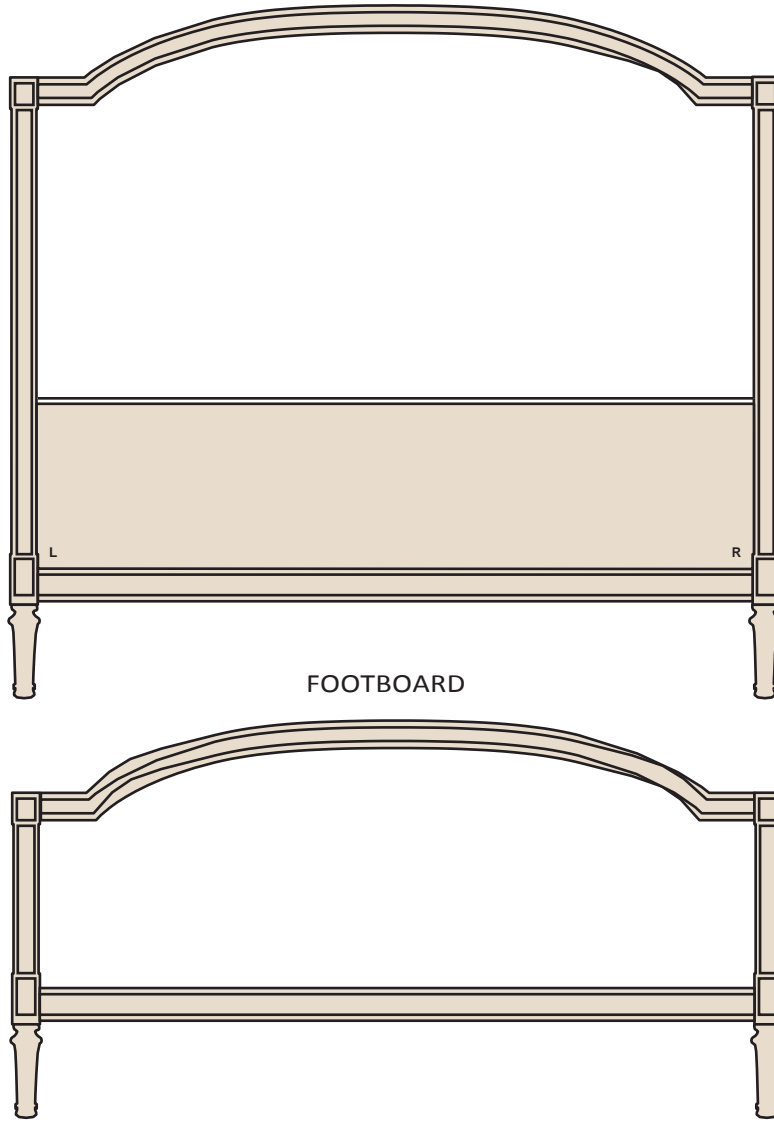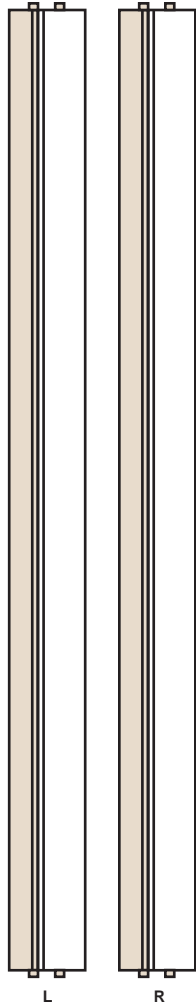

STRAIGHT SLAT x 1


"T" SLATS x 6

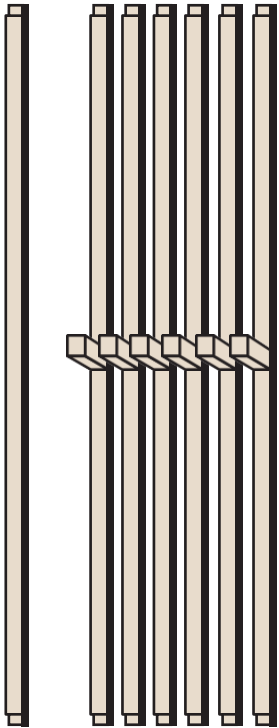

STEP 1.


LINE UP THE HEADBOARD AND FOOTBOARD WITH THE LEFT AND RIGHT BED RAILS.

Please look for the sticker labels at the base of each piece to guide you.

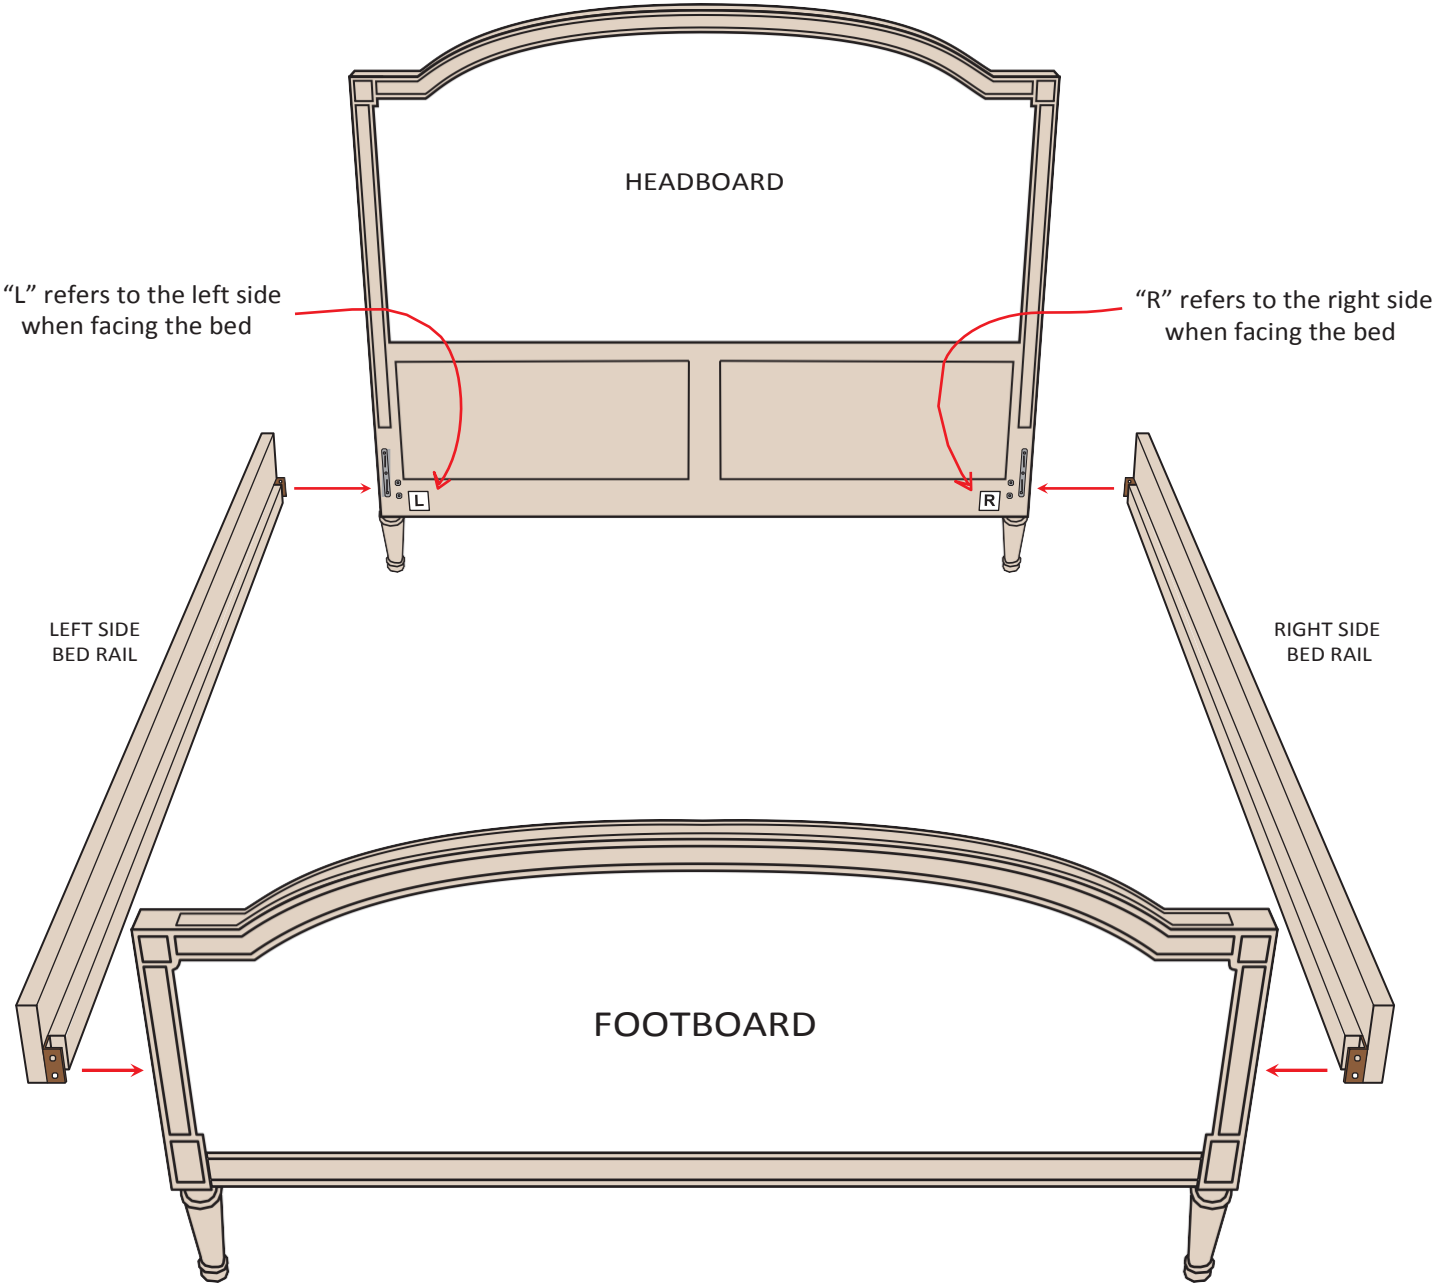


STEP 2.

**ATTACH THE BED RAILS
TO THE HEADBOARD
AND FOOTBOARD.**

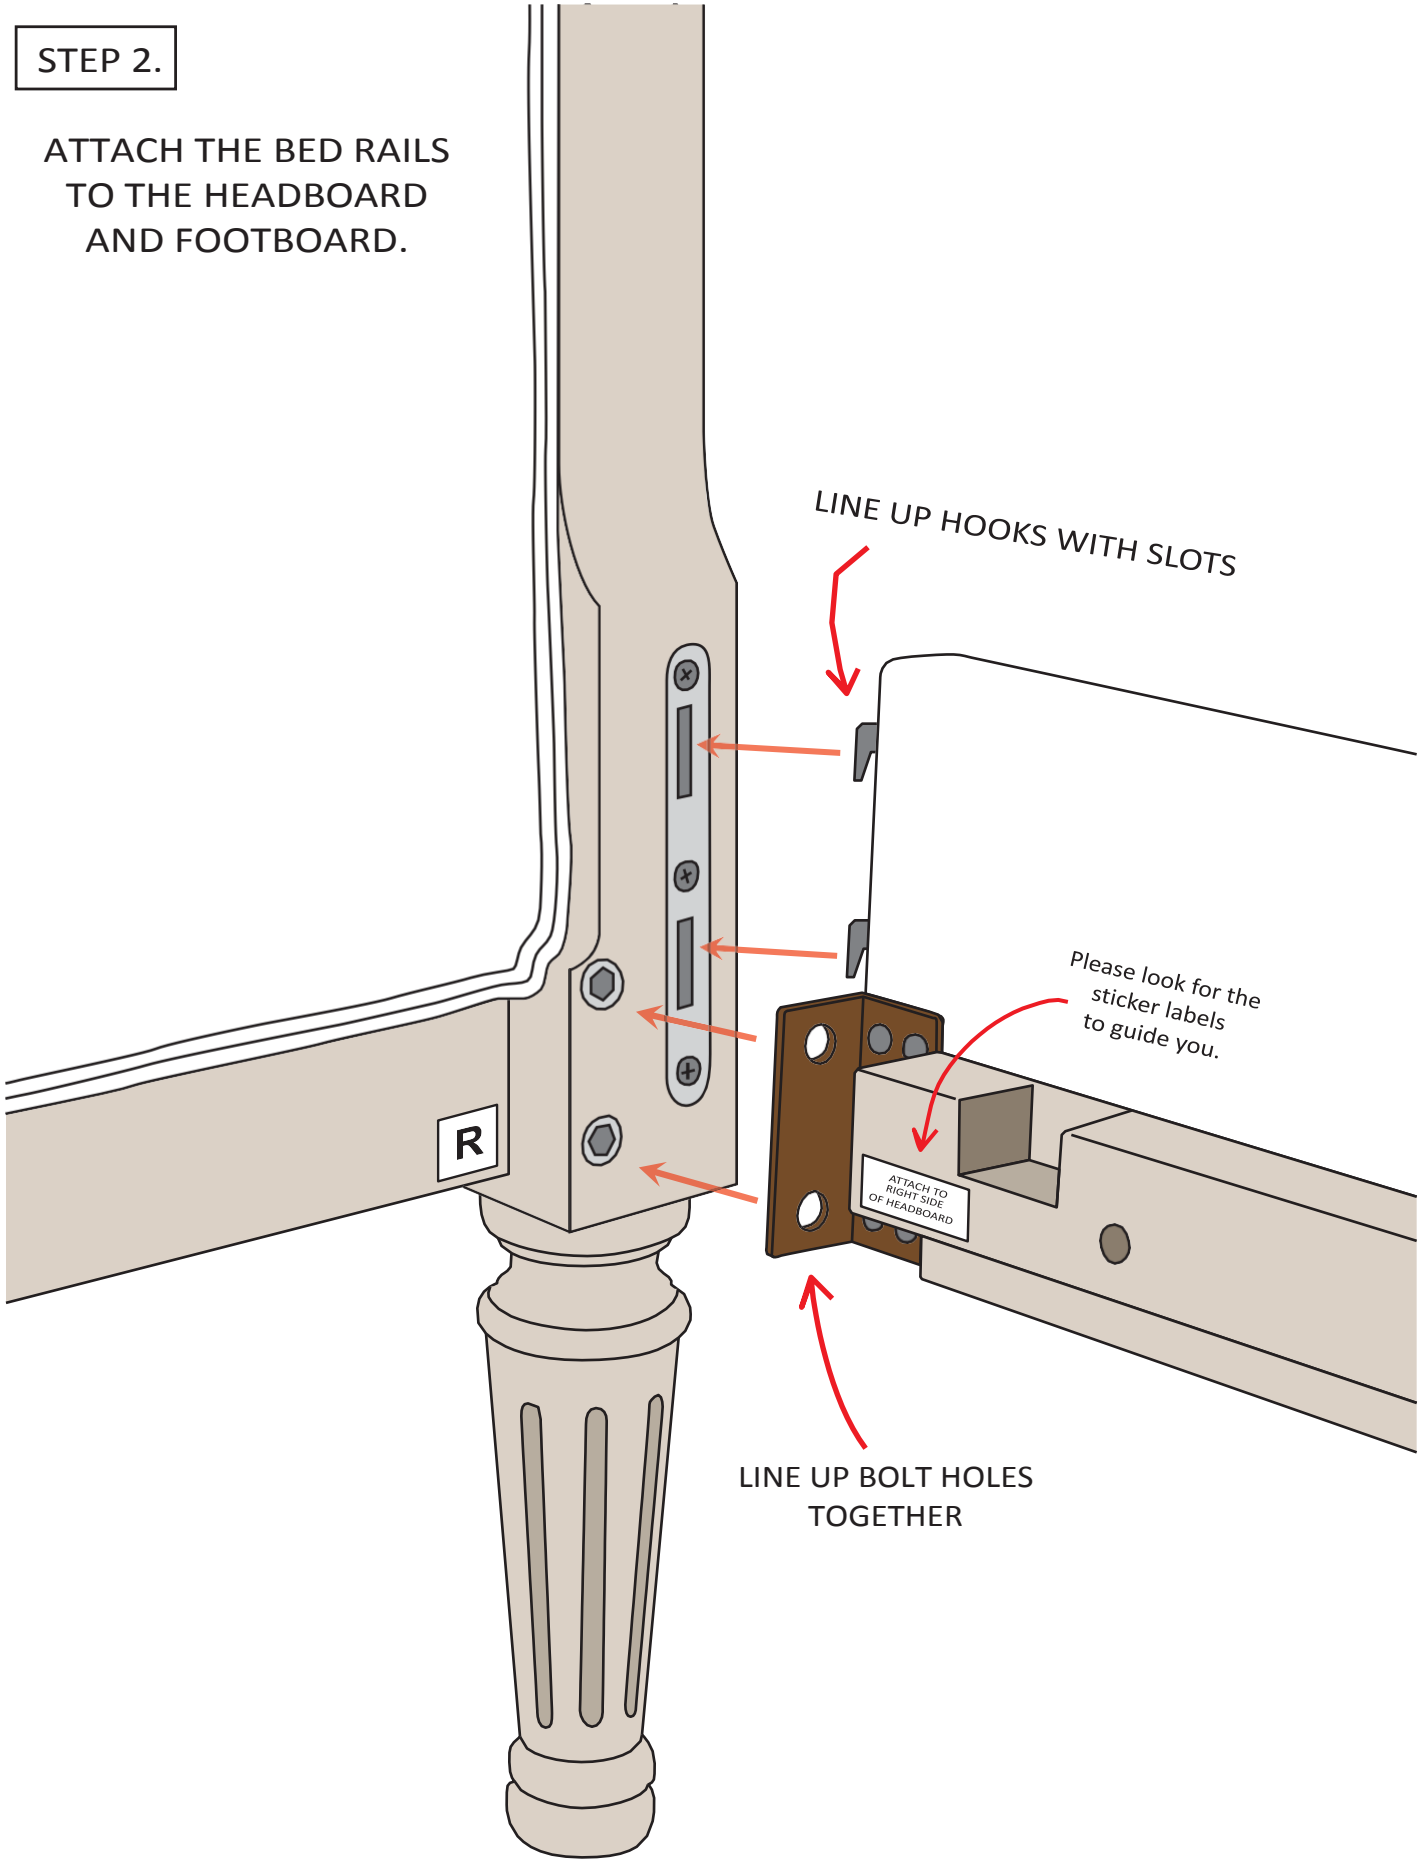

STEP 3.

USE HEX WRENCHES
TO TIGHTEN BOLTS
AND SECURE BED RAILS
TO HEADBOARD
AND FOOTBOARD.

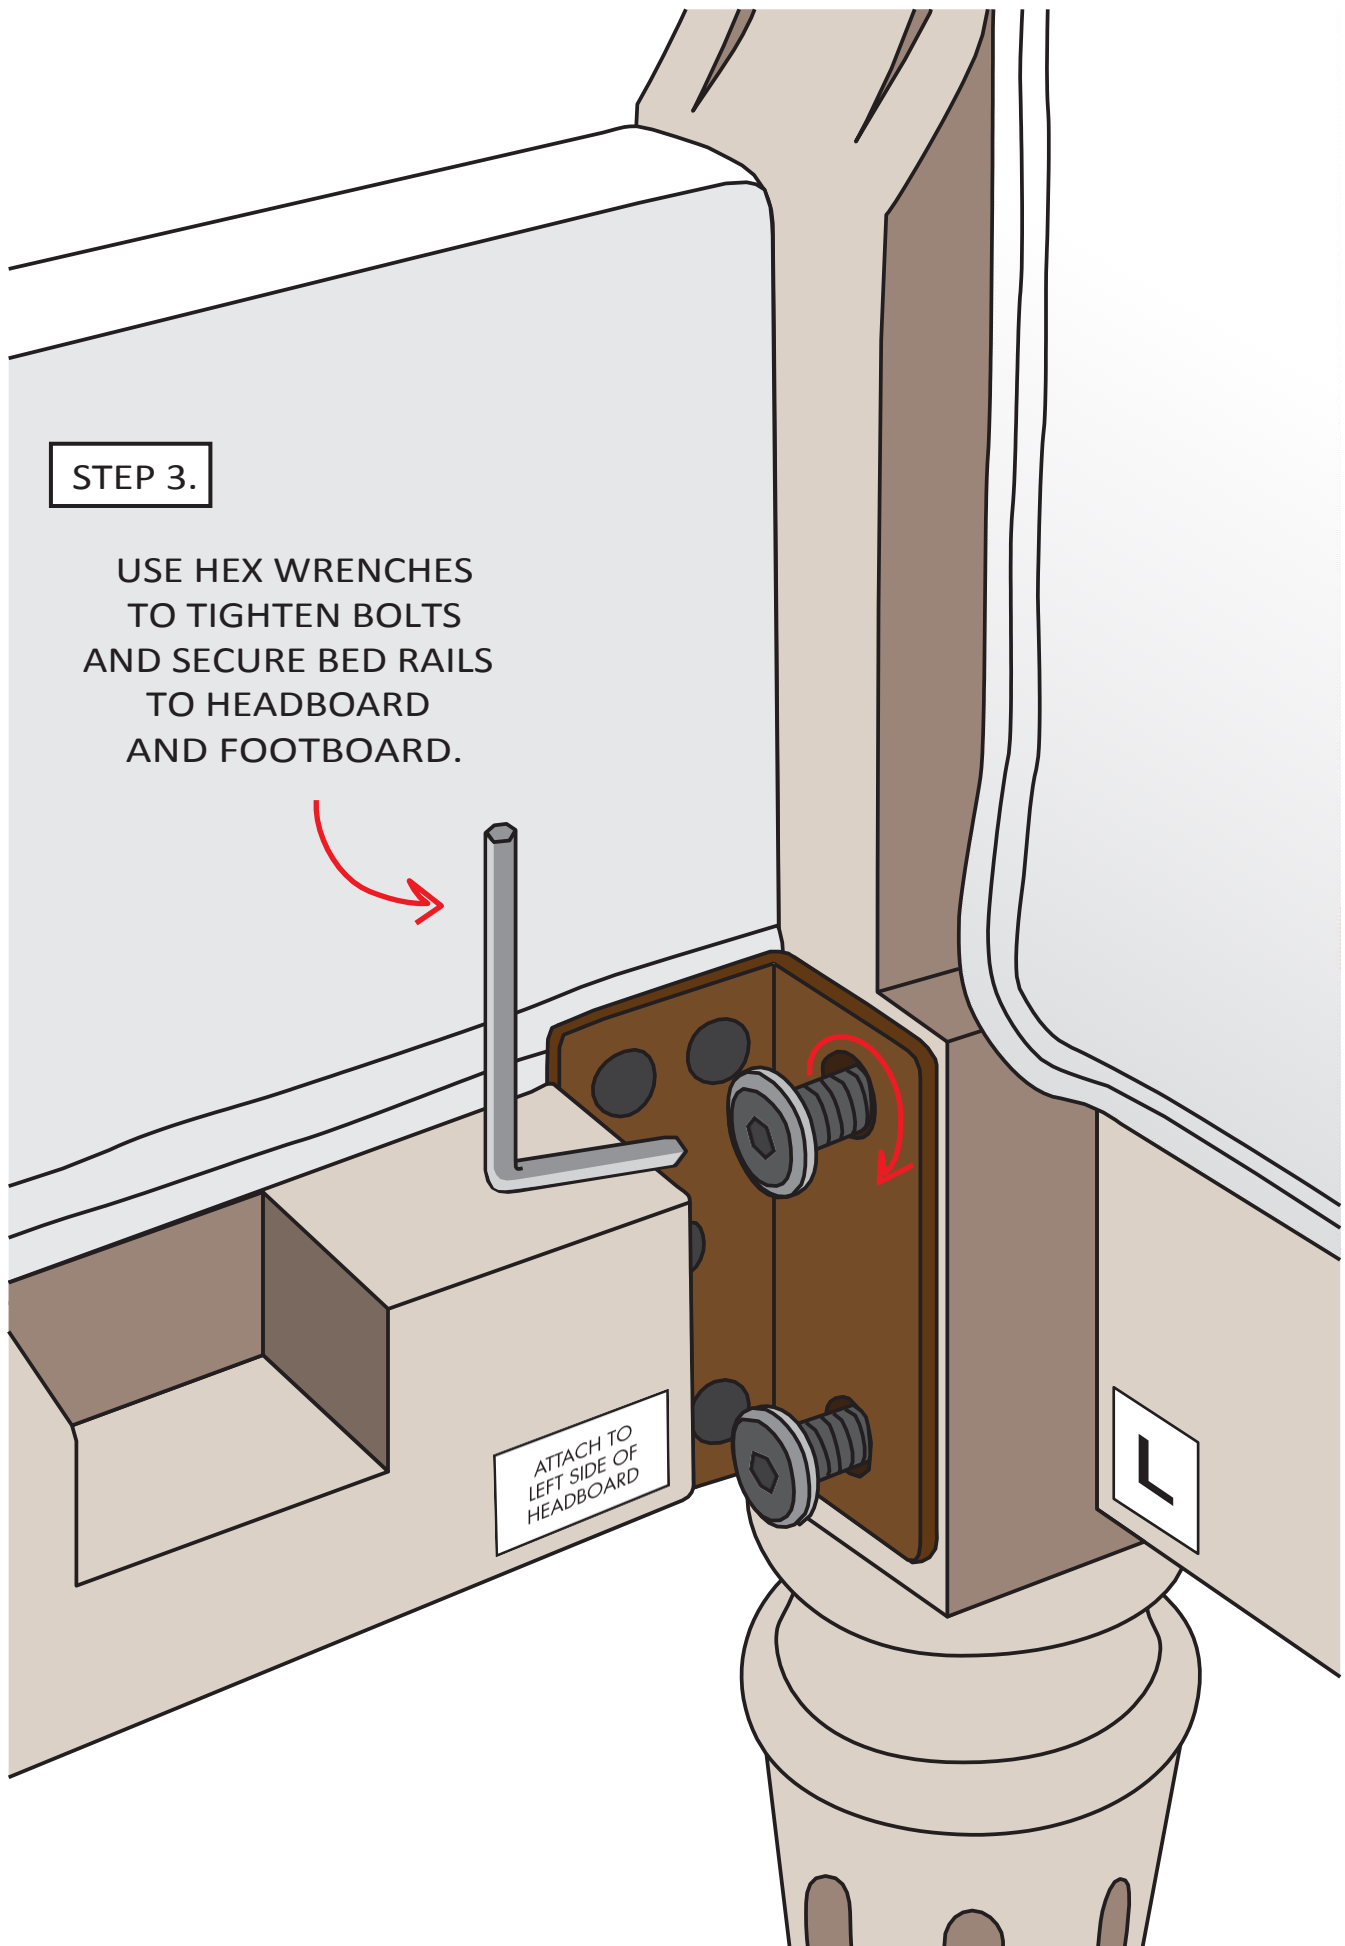


ATTACH TO
LEFT SIDE OF
HEADBOARD

STEP 4.


ONCE RAILS ARE ATTACHED SECURELY TO BED FRAME,
INSERT MATTRESS SUPPORT SLATS INTO BASE.

6 x "T" SLATS

1 x STRAIGHT SLAT



PLACE "T" SLATS
BEGINNING AT
HEADBOARD

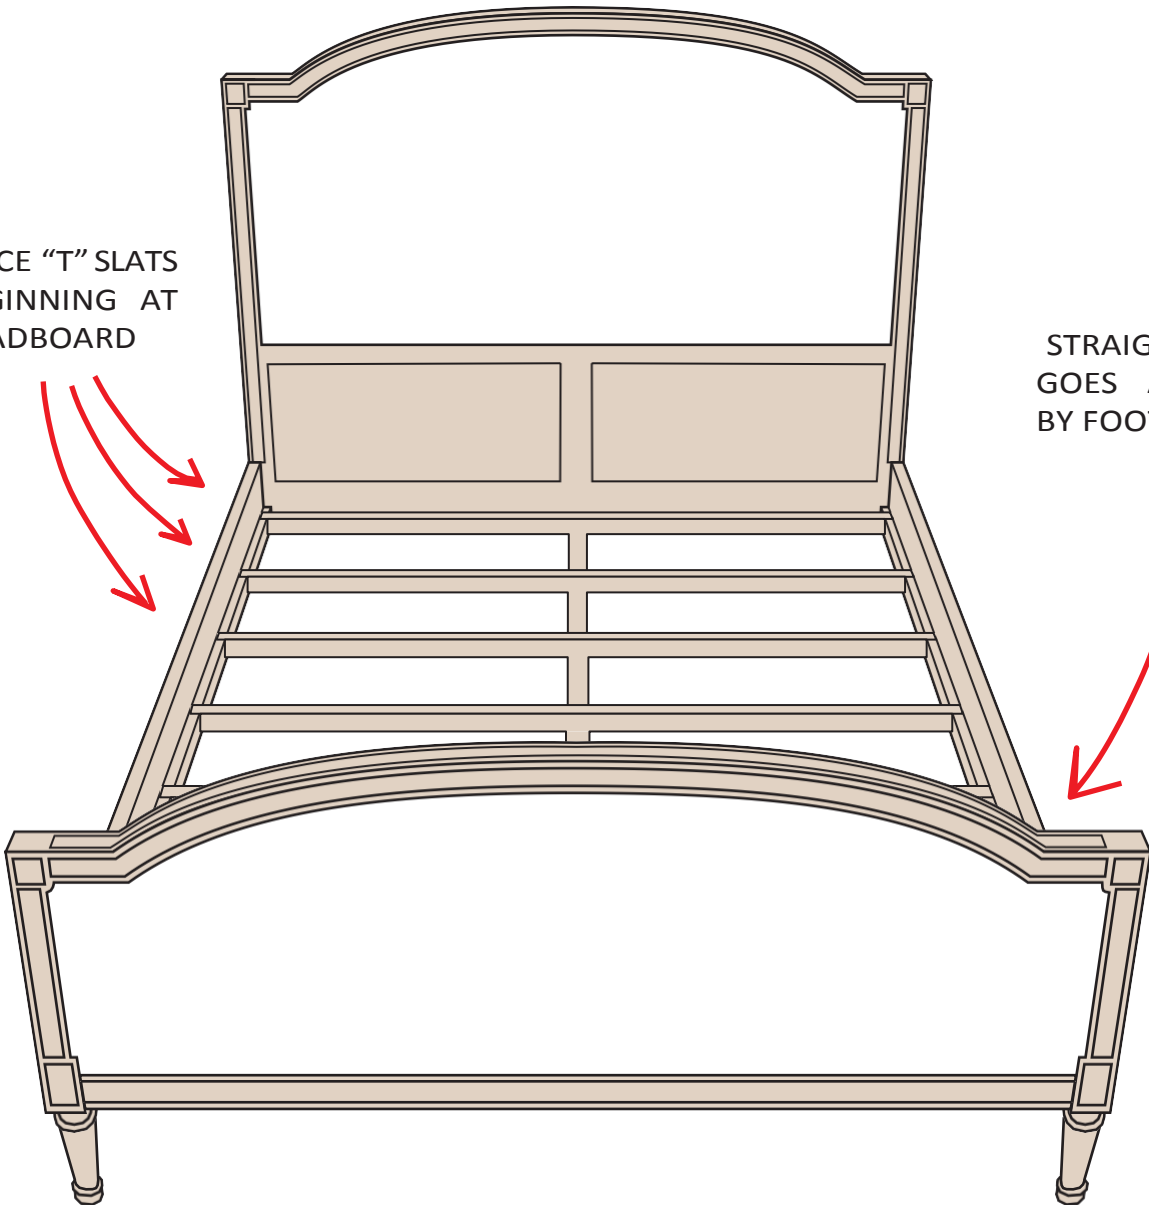


STRAIGHT SLAT
GOES AT END
BY FOOTBOARD

STEP 5.

ARRANGE CANOPY POSTS IN CORRECT ORDER

Please look for the sticker labels to guide you on placement.

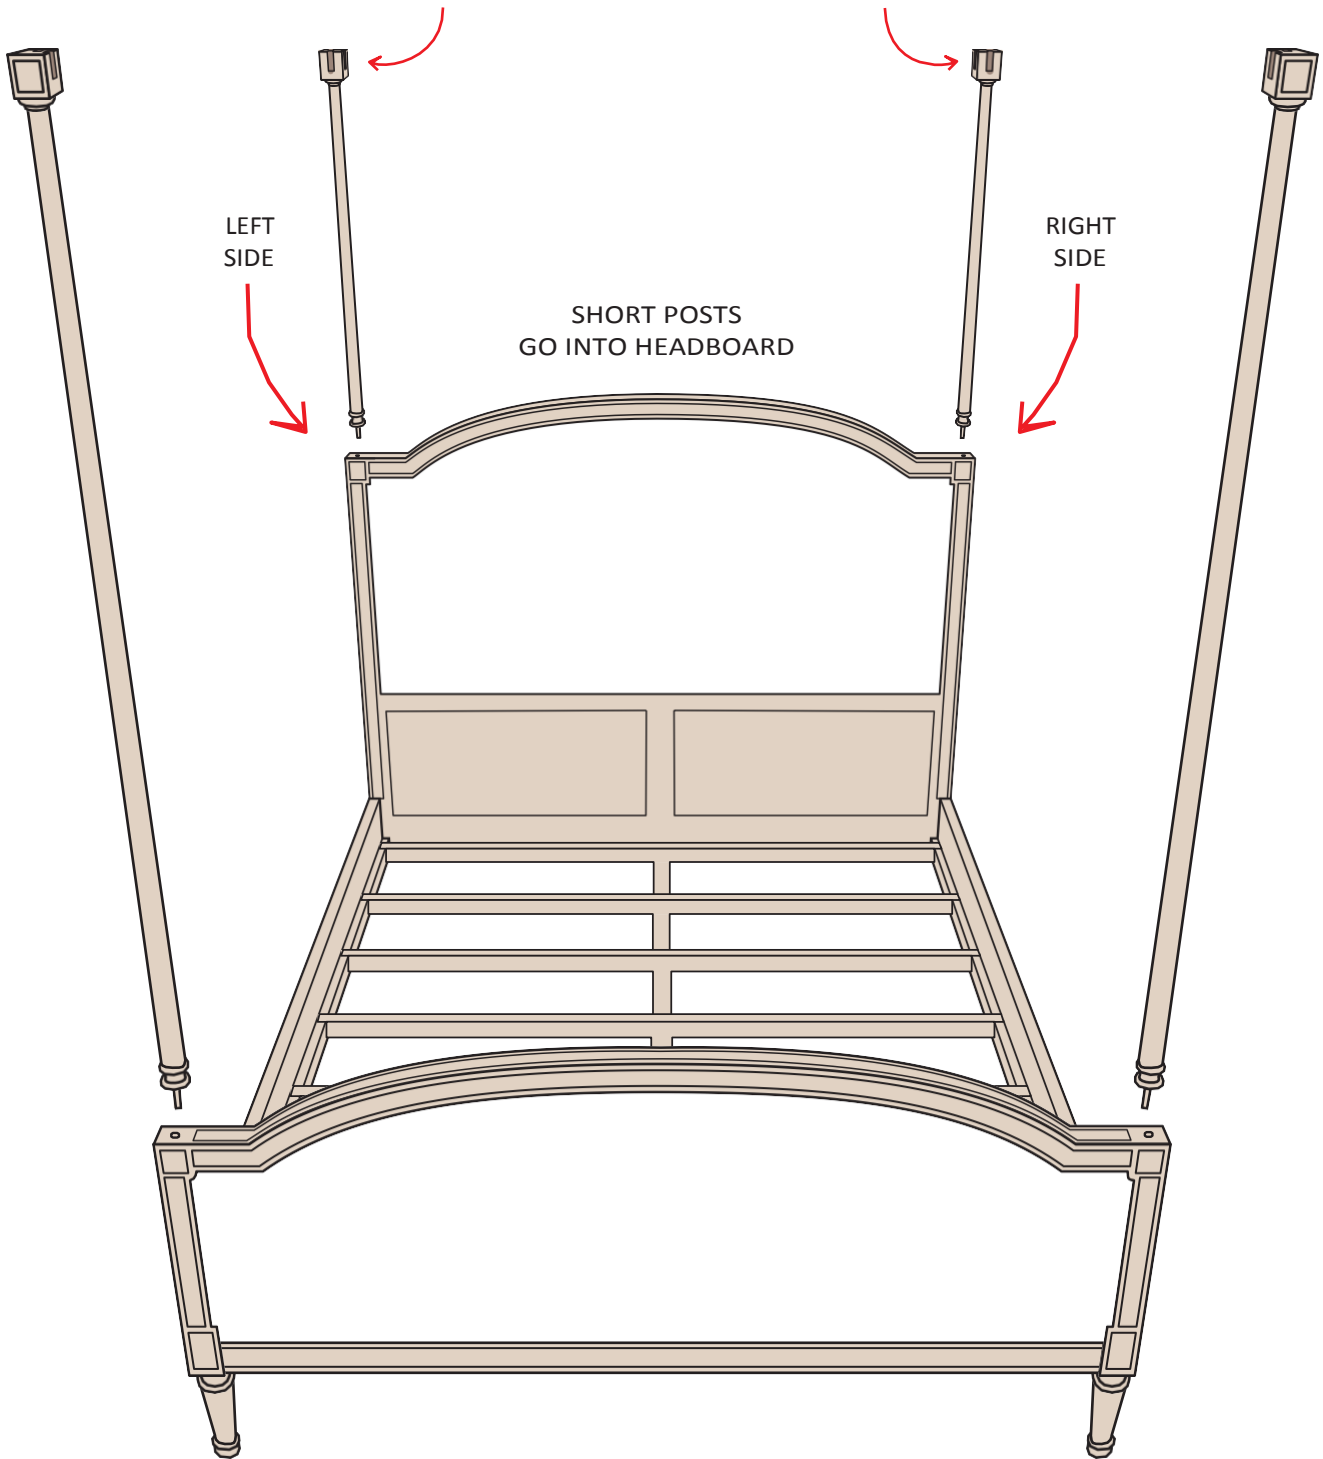

SHORT POSTS
GO INTO HEADBOARD

LEFT
SIDE

RIGHT
SIDE

LONG POSTS
GO INTO FOOTBOARD


STEP 6.

SCREW IN ALL FOUR POSTS

IMPORTANT:

DO NOT OVERTIGHTEN!

OVERTIGHTENING MAY
STRIP THE THREADS OFF
INSIDE THE BOLT HOLES

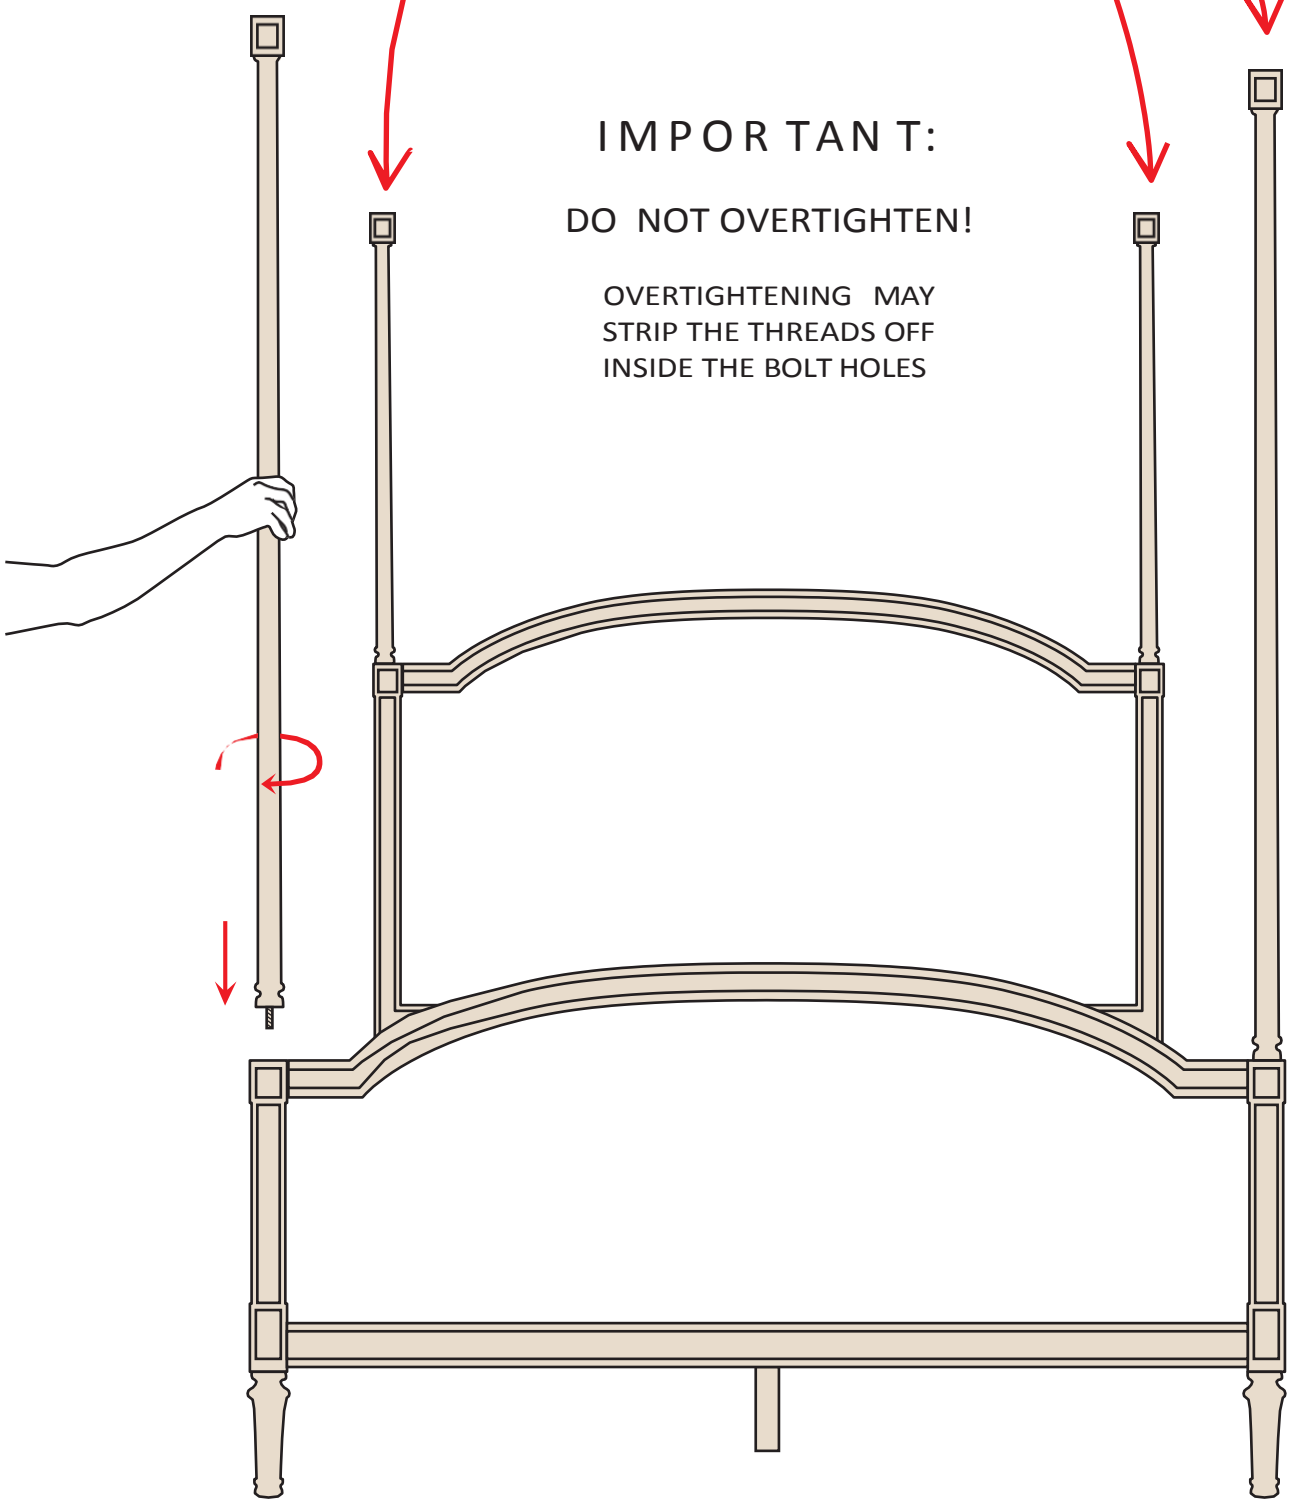


STEP 7.

HAVE TWO PEOPLE STAND ON LADDERS
AND LOWER THE CANOPY BARS INTO THE SLOTS
ON THE CANOPY POSTS.

IMPORTANT:

INSERT BOTH ENDS OF CANOPY BAR INTO SLOTS *AT THE SAME TIME*.
IF YOU INSERT ONE END BEFORE THE OTHER END, THE WOOD MAY SPLIT.


Please look for
sticker labels
to guide you
on placement.

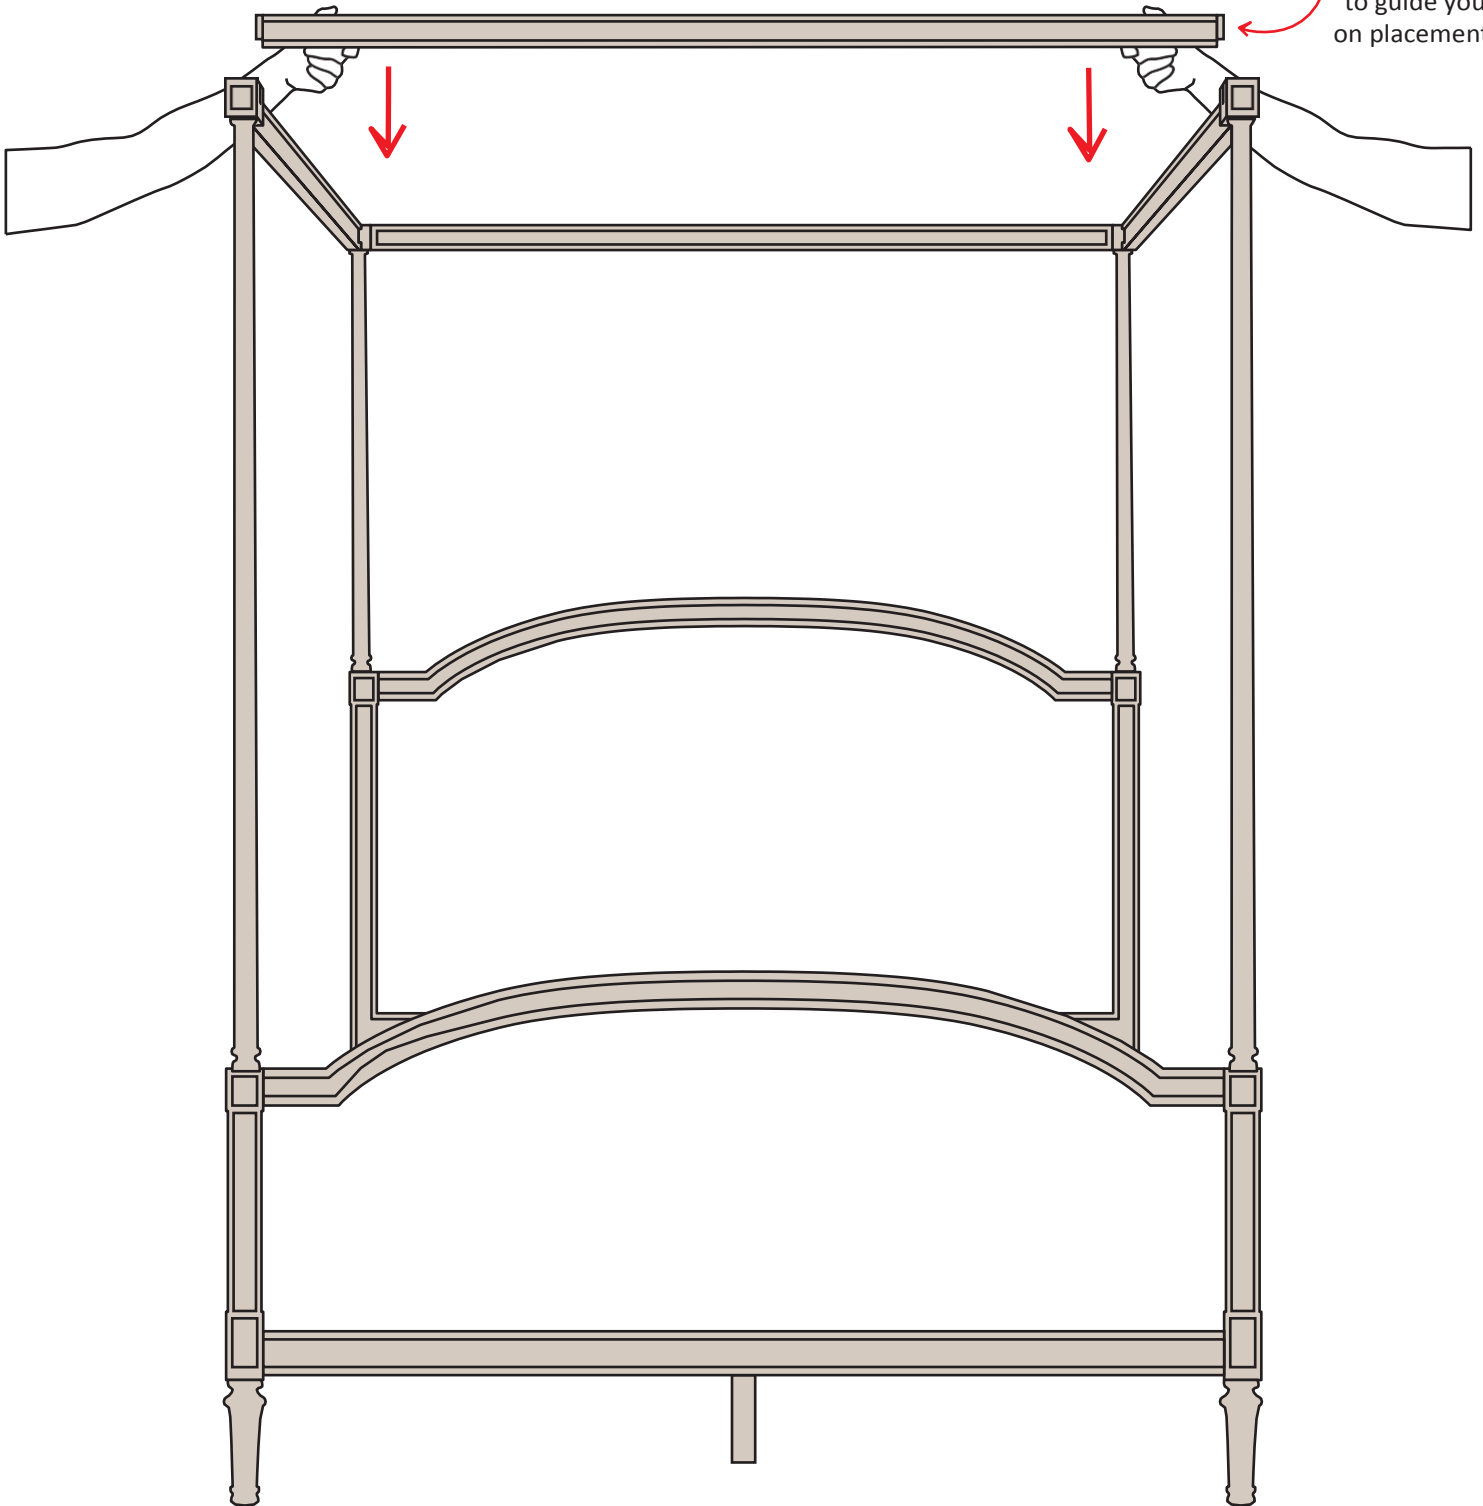

STEP 7 (detail).

LOWER CANOPY RAILS
CAREFULLY INTO SLOTS.

Please look for
sticker labels
to guide you
on placement.

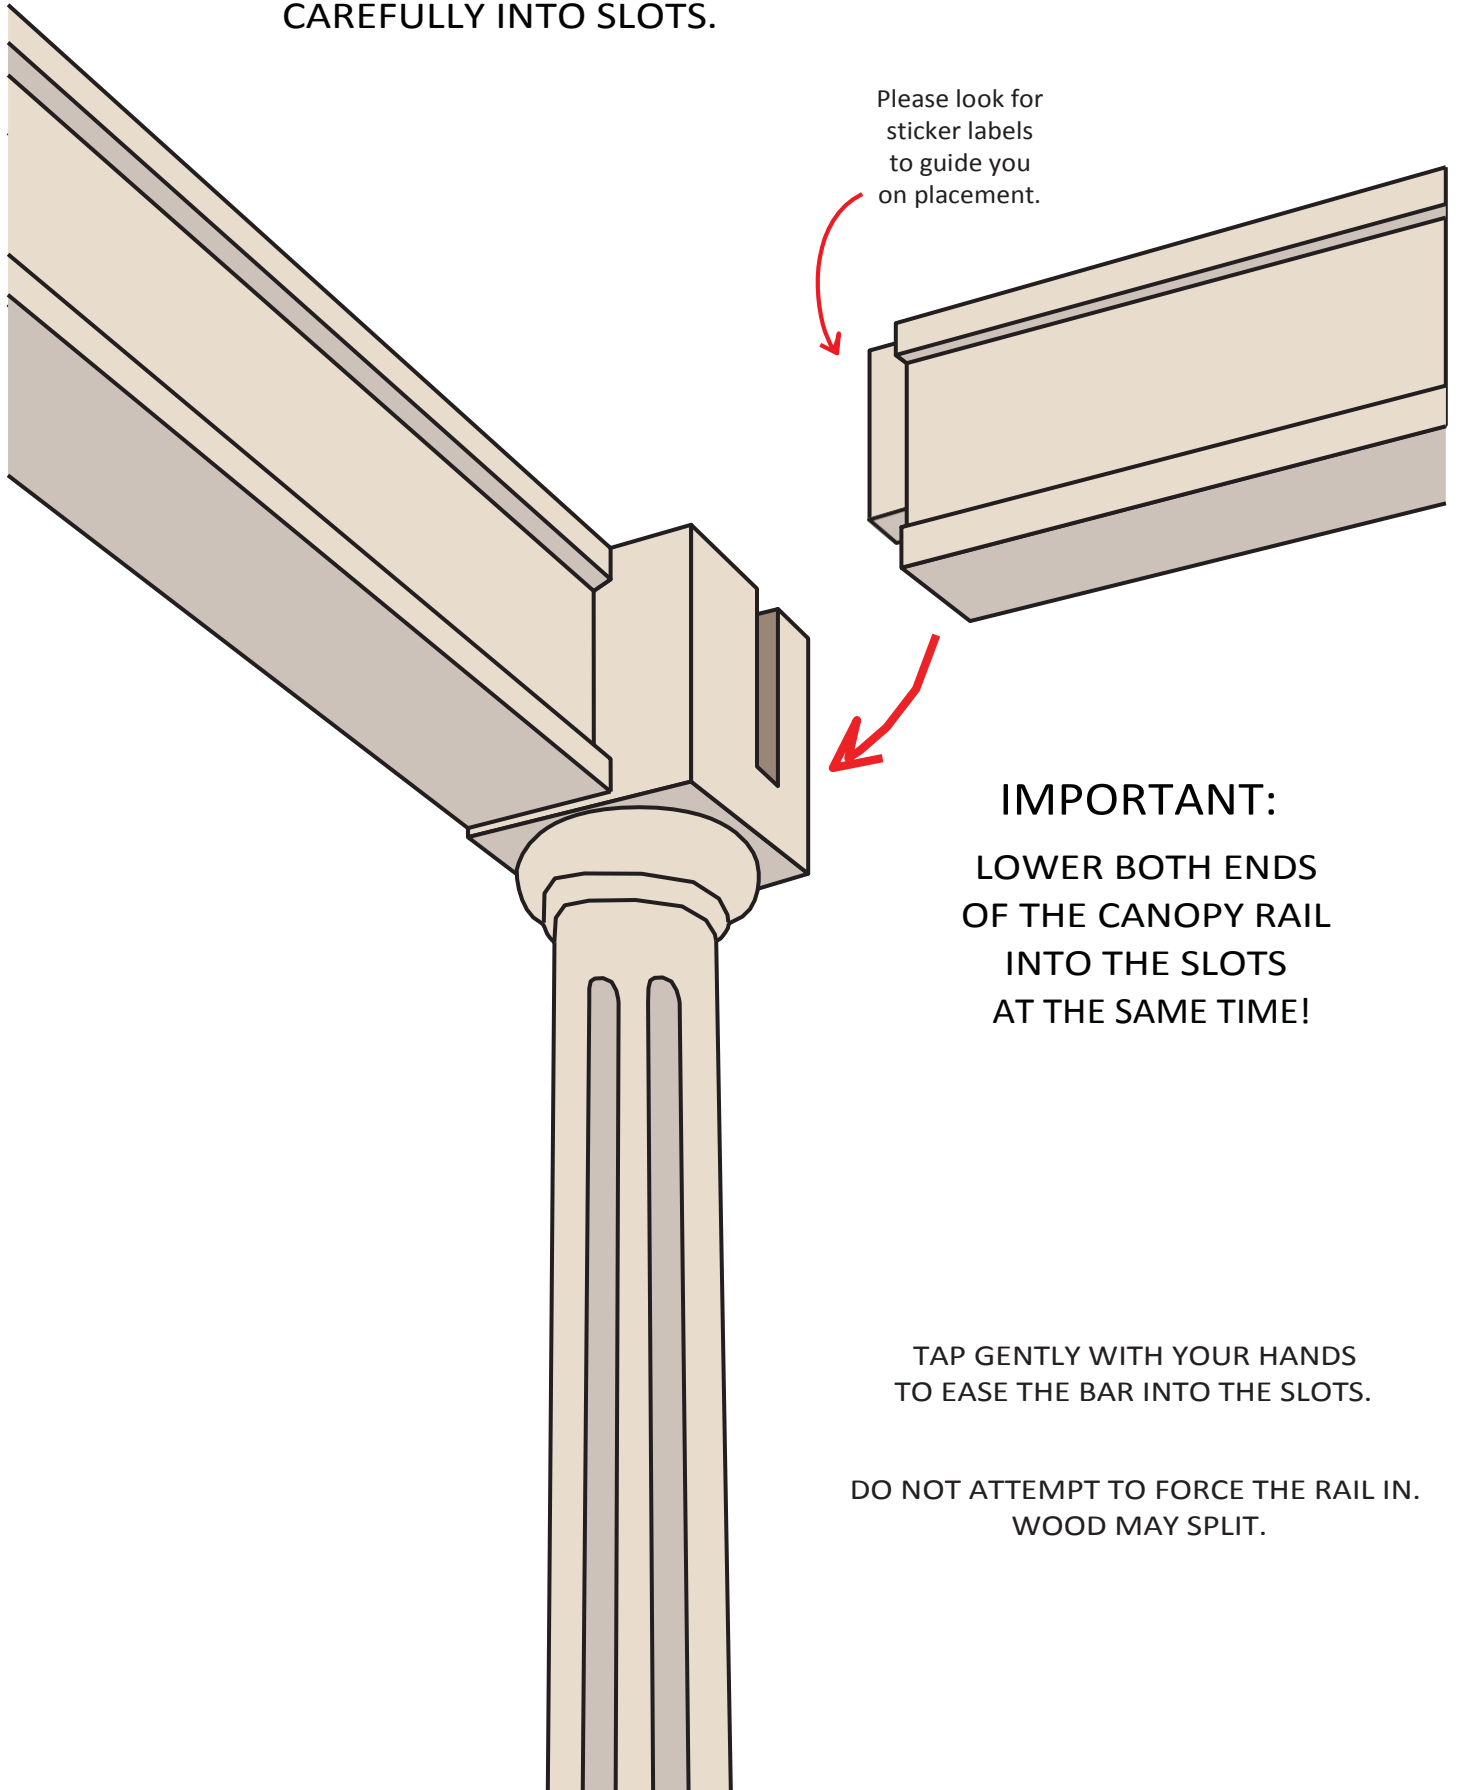

IMPORTANT:
LOWER BOTH ENDS
OF THE CANOPY RAIL
INTO THE SLOTS
AT THE SAME TIME!


TAP GENTLY WITH YOUR HANDS
TO EASE THE BAR INTO THE SLOTS.

DO NOT ATTEMPT TO FORCE THE RAIL IN.
WOOD MAY SPLIT.

STEP 8.

FINAL STEP:
SCREW FINIALS INTO TOPS OF POSTS.

SCREW IN UNTIL
BOTTOM OF FINIAL
RESTS GENTLY ON TOP
OF CANOPY POST.

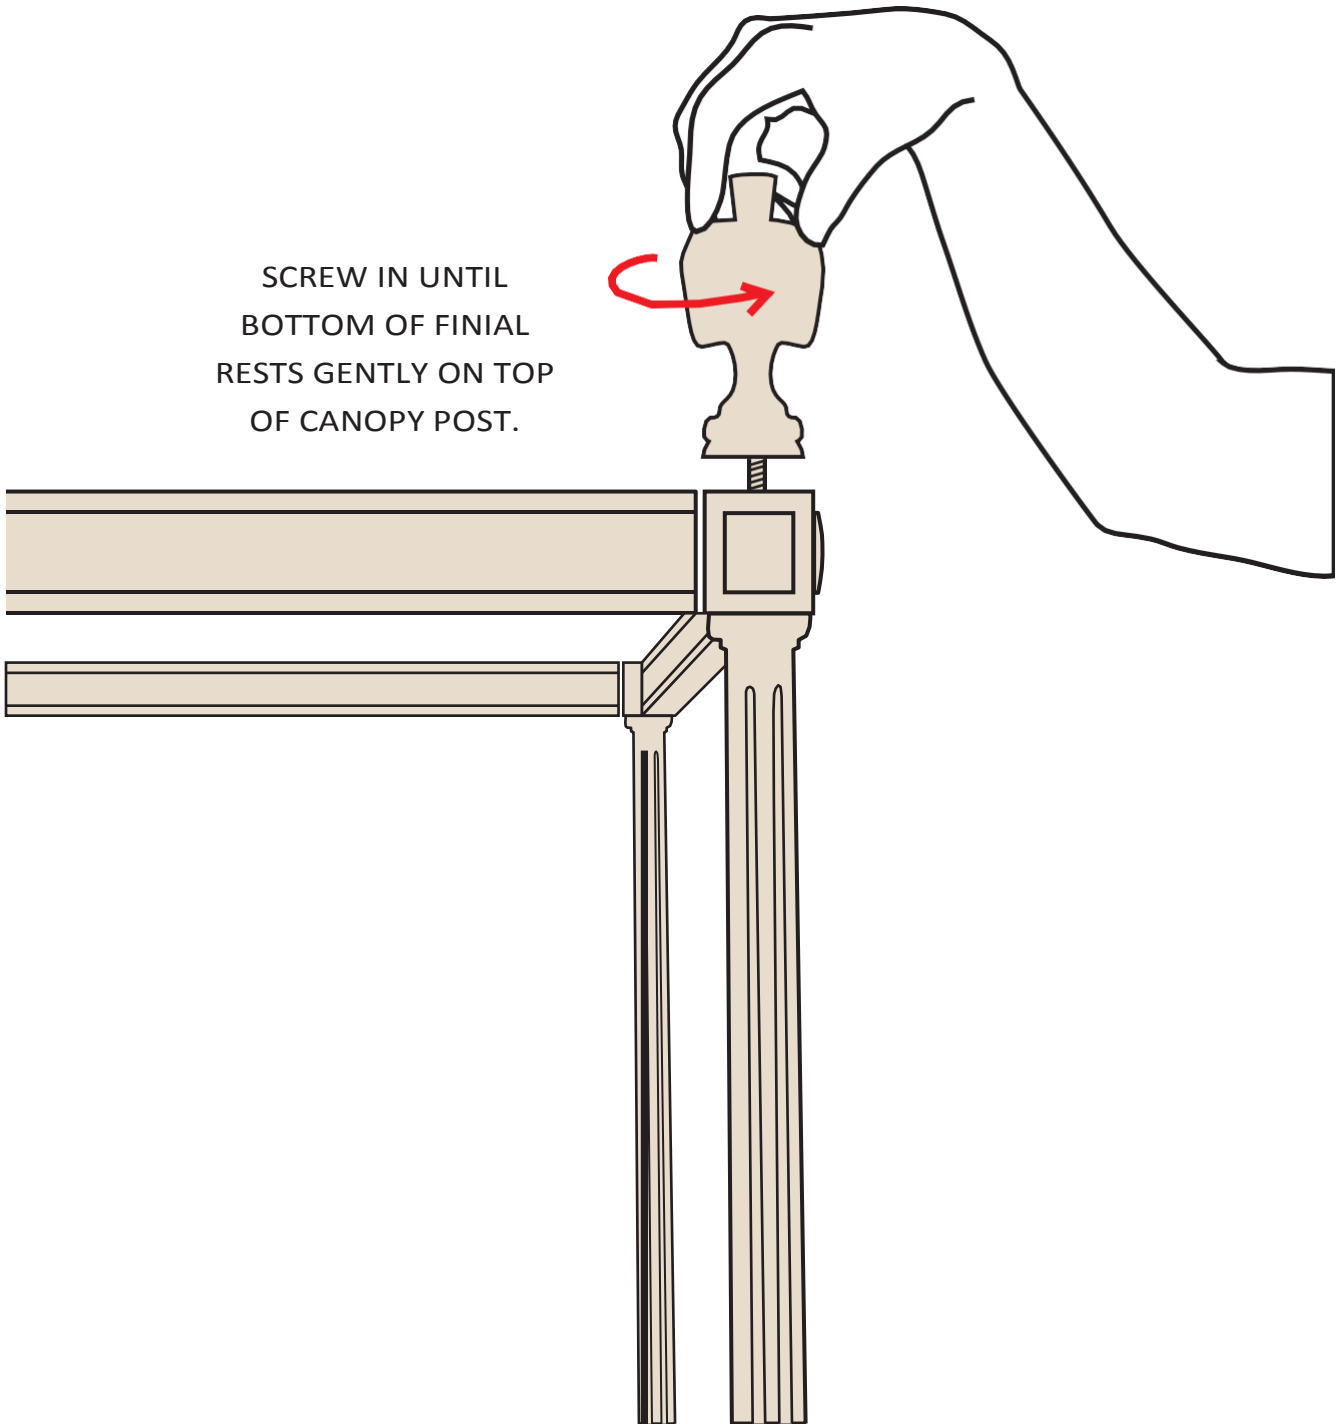

CARE INSTRUCTIONS

For best results, please consult a professional upholstery cleaner. Hardware may loosen overtime, periodically check connections and re-tighten if necessary.



ELOQUENCE®
Maison Fondée en 2002

WWW.ELOQUENCE.COM
3601 Holdrege Ave.
Los Angeles, CA 90016
T: 310-876-0661 F: 310-876-0667
E: INFO@ ELOQUENCE.COM